

Use and Disclosure of Data
Information contained herein is classified as EAR99 under the U.S.
Export Administration Regulations. Export, reexport or diversion
contrary to U.S. law is prohibited.

INSTRUCTION MANUAL

MODEL FCA380

FREE CHLORINE ANALYZER



DANGER



Toxic gases and or flammable liquids may be present in this instrument.

Personal protective equipment may be required when servicing this instrument.

Hazardous voltages exist on certain components internally which may persist for a time even after the power is turned off and disconnected.

Only authorized personnel should conduct maintenance and/or servicing. Before conducting any maintenance or servicing, consult with authorized supervisor/manager.

P/N FCA380
Date 10/18/22

 Teledyne Analytical Instruments

SCREEN MAP

CAL (Calibration)	Auto	Cal 1 (Offset) using Calibration Solution					
		Cal 2 (Slope) using Calibration Solution					
	Standardize	Enter Grab Sample Determined Value					
	Manual	Enter Offset, the PV value and associated mV					
		Enter Slope, mV/pH, mV/decade, mV/ppm...					
Temp	Enter measured Temperature						
CONFIG (Configuration)	XMTR	LCD	Set Up	Temp. Format	°C or °F		
				Contrast	Adj. 0-100%		
				Back Light	Enter ON time		
				Range Lock	Choose: Auto, ppb, ppm, ppT		
			Graph	Line	Screen Duration		
				Gauge			
				Bar			
			Label	TAG ID	Enter Name		
				TAG	ON/OFF		
				POP UP	ON/OFF		
		SENSOR		Enter Name			
		Output	4-20 mA (1 or 2)	Range (PV or Temp.)	4 mA =		
					20 mA =		
				Cal (more)	Trim 4.00 mA		
					Trim 20.00 mA		
	Fault (more)			3.5 mA			
				22 mA			
	RELAY		Relay 1	Alarm	Set Point		
				Timed	Period, Duration		
				Fault			
			Relay 2	Alarm	Set Point		
				Timed	Period, Duration		
				Fault			
	Relay 3	Alarm	Set Point				
		Timed	Period, Duration				
		Fault					
	HOLD	Time out: None, 15 min, 30 min...					
Serial	Address						
	Baud rate						
	Format						
Password	Menu	Off/On	" _____ "				
	CAL	Off/On	" _____ "				
	CNFG	Off/On	" _____ "				
	SIM	Off/On	" _____ "				
Sensor	Sensor 1 or 2	Type	Choose Type: pH, Cond, ORP.....				
		T COMP	Enter % Comp				
		ISO PT	Enter mV value				
	Qty of Sensors	Choose 1 sensor or 2 sensors					
	COMP	Dissociation, Interference, Percentage, OFF					
	Load Default	Sensor/Transmitter	Yes/No				
DAMP	Enter Signal Dampening (# of readings to average, 0-100)						
INFO (Information)	XMTR	Configuration, Serial #, Name, Outputs					
	Sensor	Calibration logs, Serial #, Name					
SIM (Simulate)	System	Sensor 1 or 2	Fixed value				
			Ramp				
	Relays	#1 ON/OFF	#2 ON/OFF	#3 ON/OFF			
					4-20 mA	4-20 mA Ch 1	Enter Value
						4-20 mA Ch 2	Enter Value

PREFACE

Purchasing products from TELEDYNE ANALYTICAL INSTRUMENTS. provides you with the finest liquid analytical instrumentation available. If this is your first purchase from TAI, please read the entire manual before installing and commissioning your new equipment.

If there are any questions concerning this equipment, please contact your local TAI representative, or the factory directly at:

TELEDYNE ANALYTICAL INSTRUMENTS

16830 Chestnut Street

City of Industry, CA 91748

Phone: (626) 934-1500






FAX: (626) 934-1646


or your local representative

Specific Model Information

Instrument Serial Number: _____

SYMBOLS USED IN MANUAL

	This symbol is used to designate important information, warnings and cautions. Failure to follow this information could lead to harm to the instrument or user.
	No operator serviceable parts, service by authorized service personnel only.
	This symbol is used to designate a WARNING "Risk of Electrical Shock"
	Disconnect supply before servicing
	Equipment protected throughout by double insulation.

	Read the complete manual before installing or using the equipment.
--	--

Contents of this manual are believed to be correct at the time of printing and are subject to change without notice. TAI is not responsible for damage to the instrument, poor performance of the instrument or losses resulting from such, if the problems are caused by:

- Incorrect operation by the user.
- Use of the instrument in incorrect applications.
- Use of the instrument in an inappropriate environment or incorrect utility program (power supply).
- Repair or modification of the related instrument by anyone not authorized by TAI.
- There are no operator accessible parts. Service and maintenance to be done by authorized personnel only.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

© 2018 Teledyne Instruments/ Analytical Instruments. All rights reserved. No part of this manual may be used or reproduced in any form or by any means, or stored in a database or retrieval system without prior written permission from TAI. Making copies of any part of this manual for any purpose other than personal use is a violation of United States copyright laws. Document printed in the United States of America.

TABLE OF CONTENTS

Screen Map	i
Preface	ii
Symbols Used in Manual.....	iii
1.0 General Description	3
1.1 Features	4
1.2 Specifications	4
1.2.1 Sensors and Flow Train	4
1.2.2 FCA380 Analyzer	4
1.3 Model Codes	5
2.0 Installation	6
2.0.1 ATEX/IECEX Installations	6
2.0.2 FM Installations.....	6
2.1 Mounting	7
2.2 Wiring	8
2.2.1 Wiring, power	9
2.2.2 Wiring, Sensor.....	9
2.2.3 Wiring, 4-20 mA Outputs	9
2.2.4 Wiring, Contact Relay Outputs.....	9
2.2.5 Wiring, Serial Output MODBUS RTU	10
2.3 Plumbing	10
2.3.1 Sample Requirements	10
2.3.2 Connecting the Inlet and Drain fittings	10
2.4 Installing the Sensors	10
3.0 Operation	11
3.01 Influences on the Measurement pH Value	11
3.02 Influences on the Measurement Flow	12
3.03 Influences on the Measurement Temperature.....	12
3.1 Keys.....	13
3.1.1 Home/Exit Key	13

3.1.2 Back/Hold Key.....	13
3.1.3 Selection Adjustment Keys.....	13
3.1.4 Alpha Numeric Entry.....	14
3.2 Menu Structure.....	14
3.2.1 HOLD (Output Hold).....	14
3.2.2 CAL (Calibration Menu).....	14
3.2.3 CONFIG (Configuration Menu).....	15
3.2.4 INFO (Information Menu).....	16
3.2.5 SIM (Simulation Menu).....	17
3.2.6 Fault Screens.....	17
3.3 Output Configuration Guide.....	18
3.3.1 Configure 4-20 mA output range.....	18
3.3.2 Configure 4-20 mA Fault Condition and Cal.....	18
3.3.3 Configure Alarm Relays (Relays Optional).....	18
3.3.4 Exit Menus and Return to Main Display.....	19
3.3.5 Sensor Start Up.....	19
3.4 User Selectable Options.....	20
3.4.1 Screen Lighting.....	20
3.4.3 Graphical display.....	20
3.4.4 TAG Transmitter Name.....	20
3.4.5 Sensor Name.....	21
3.4.6 Password Protection.....	21
4.0 Calibration.....	22
4.0.1 AUTO Calibration description.....	22
4.0.2 STANDardize Calibration description.....	22
4.0.3 MANUAL Calibration description.....	22
4.1 pH Calibration Procedures.....	24
4.1.1 AUTO Cal using pH 4.01, 7.00, 10.00 buffers.....	24
4.1.2 AUTO Cal using other pH buffers.....	24
4.1.3 Standardize.....	25
4.2 Free Chlorine Calibration Procedures.....	25
4.4.2 Standardize.....	26
4.4.3 Manual Cal.....	26

5.0 Maintenance	28
5.1 Free Chlorine Sensor	28
5.2 pH Sensor	29
5.2.1 Electrode Cartridge Installation	29
5.2.2 Electrode Cartridge Replacement	29
5.2.3 Electrode Cleaning	29
5.2.4 pH Electrode Cartridge Cleaning	30
5.3 Constant Head Flow Controller (CHFC)	30
6.0 Troubleshooting	31
7.0 Parts and Accessories	33
7.1 FCA380 Replacement parts	33
7.1 380 Replacement Parts	33
Appendix	34
A. Auto Cal Buffer Tables	34
B. MODBUS RTU Register Listing	34
03 (0x03) Read Holding Registers	34
06 (0x06) Write Single Register	35
Registers	35
Fault Status	39
Warning Status	39
Sensor Type	39

1.0 GENERAL DESCRIPTION

The Model FCA380 is designed to measure the concentration of Free Chlorine in drinking water, industrial cooling water, rinse water or other samples of fresh water that use chlorine in the range of 0-20 ppm as a disinfectant. Chlorine exists in water as a pH dependent mixture of hypochlorous acid and hypochlorite ion. The sum of these two components is referred to as Free Chlorine, sometimes Residual Free Chlorine.

The FCA380 is a complete system for measuring Free Chlorine. The panel mounted system includes a Constant Head Flow Controller (CHFC), Free Chlorine sensor (FCS) and Flow Cell, pH sensor (SP3XpH) and Flow Cell and the LXT380 Transmitter. Simply supply power to the LXT380 Transmitter and plumb the sample line in and the drain line out and the FCA380 is ready to use.

The CHFC maintains a constant sample flow to the pH and Chlorine flow cells. Activateure regulators and rotameters are not needed to maintain a constant flow rate, the CHFC provides trouble free sample conditioning between 10 and 80 gal/hr.

The Free Chlorine Sensor (FCS) is an amperometric sensor with a PTFE membrane, gold cathode and a silver/silver chloride anode.

The LXT380 analyzer applies a fixed voltage across the chlorine electrode and measures the current flow. Hypochlorous acid (HOCl) diffuses through the PTFE membrane and is reduced (gains electrons) by the gold cathode to chloride ion. Silver on the anode is oxidized (donates electrons) to silver chloride completing the current loop. With stable temperature and sample flow, the current flow is proportional to the free chlorine concentration.

Many competitive chlorine sensors require service on a monthly or bimonthly basis. The FCS uses a large surface area anode, combined with a large volume of electrolyte and a small cathode to provide operational cycles of up to a year without refilling. The replaceable PTFE membrane is also designed for long term stability. A special support grid maintains a constant tension between membrane and the cathode minimizing effects caused by varying pressures and flow. Replacing the PTFE membrane and recharging the electrolyte is easily accomplished without the use of tools.

The Model LXT380 transmitter is 24 VDC powered. The standard configuration has a 4-20 mA output and a RS485 serial communication port with MODBUS® RTU. Alarm relays are optionally available.



1.1 FEATURES

- **Panel Mounted System**, Easy Installation
- **Plumb and Play Design**, Ready to Use
- **Automatic pH Compensation**, No Expensive Reagents to mix or spill with convenient sample port
- **Automatic Flow Control**, Eliminates Activateure Regulators and Rotameters
- **LXT380 Transmitter Capability**, Dual Measurements, 24VDC, Graphical Plots
- **Compliant with EPA Method 334.0**



1.2 SPECIFICATIONS

1.2.1 SENSORS AND FLOW TRAIN

Chlorine Sensor:

Polarographic, Gold cathode/Silver-Silver chloride anode, PTFE membrane

pH Sensor:

Digital SP3X protocol, 316L stainless steel body with replaceable electrode cartridge

Measurement Range:

Chlorine: 0.05 to 20 ppm (High Range)
0.01 to 5.00 ppm (Low Range)

pH: 0 to 14 pH

Operating Temperature:

0° C to 50° C (32° F to 122° F)

Min/Max Flow:

38 L/hr. to 300 L/hr. (10 gal/hr. to 80 gal/hr.)

Wetted Materials:

PVC, PP, PVDF, PTFE, Glass, 316 SS

Process Connections:

Input ¼" FNPT with barb fitting, Drain ¼" FNPT

Response Time:

T90 in 2 minutes

Electrolyte Life:

Up to 12 months

1.2.2 FCA380 ANALYZER

Measurements:

Chlorine: 0.00 ppb to 20.00 ppm (color inverted screen above 20.00 ppm to the limit of the sensor)
pH: 0.00 to 14.00 pH

pH Compensation of Free Chlorine:

pH 5 - 10 (accuracy degrades rapidly above 9 pH)

Display:

128 x 64 pixels (2.75" x 1.5") LCD, Black on Grey background, Blue on White background with LED backlight on 100-250 VAC and 24 VDC powered instruments



Outputs:

- (1) 4-20 mA for Free Chlorine set to Sensors Range
- (1) 4-20 mA for pH (Optional) set 0-14 pH
- Modbus RTU (standard)

Alarm Relay Ratings:

Three (3) SPDT, 1 form C, 250 VAC, 10 Amp resistive maximum, relays, user configurable as Hi/Lo alarms with expiration timer, Periodic Timers or Fault alarms

Input Power

24 VDC (18-36 VDC @ 250 mW minimum)

Enclosure:

316 SS

Environmental Conditions:

Outdoor use (IP66, NEMA 4X)

Ambient Temperature -20°C - 70°C (24 VDC Models)
 -20°C - 60°C (100-240 VAC Models)

Storage Temperature -30°C - 85°C

Relative Humidity 0 – 80%, up to 31°C
 Decreasing linearly to 50% RH a 40°C

Altitude Up to 2000 m (6500 ft)

Mains Supply Voltage Fluctuations up to ±10% of the nominal voltage
 Transient over voltages: CAT II
 Pollution Degree: 2

1.3 MODEL CODES

Model FCA380-								
Sensor type and Range	0 0.05 to 20 ppm Free Chlorine (Standard)							
	1 0.01 to 5.00 ppm Free Chlorine							
	2 0.05 to 20 ppm Free Chlorine (Seawater)							
	3 0.005 to 2.00 ppm Free Chlorine (Seawater)							
	pH Comp	1 pH Sensor Stainless Steel (Standard) *FM* *ATEX/IECE*						
		2 pH Sensor Titanium (Seawater) *FM*						
		3 pH Sensor Hastalloy (Seawater) *FM* *ATEX/IECE*						
	Power	-1 24 VDC Powered Transmitter						
		Outputs and Relays	2 (x2) 4-20mA Outputs & (3) Relays (MODBUS)					
	3 (x2) 4-20mA Outputs & (3) Relays (HART)							
	Spray cleaner	0 No Spray Cleaner						
		1 Spray Cleaner						
	Enclosure	0 None						
1 Fiberglass clear door								
2 Fiberglass opaque door								
Approvals	0 No approvals							
	1 FM approvals							
	3 ATEX/IECEX approved							
FCLXT380-	0	1	-1	2	0	0		

2.0 INSTALLATION


Mount the FCA380 in a location where there is easy access to the analyzer and sensors. Install the system in an area where vibrations, electromagnetic and radio frequency interference are minimized or absent.

Do not mount in direct sunlight or areas of extreme heat. The FCA380 is suitable for outdoor use if mounted with a protective cover or sunshield.

2.0.1 ATEX/IECEX INSTALLATIONS

IECEX: ETL 16.0049X

ATEX: ITS16ATEX101458X



Model FCLXT380 Transmitter is intended for installation in hazardous locations with Zone 1, EX db mb Gb classification. Ambient temperature conditions must within $-20^{\circ}\text{C} \leq T_a \leq +55^{\circ}\text{C}$ to comply with product approval. Power connections into the transmitter must be made flame-proof conduit and cable glands certified for hazardous locations and compatible with Ex db mb Gb certified equipment.

- Ensure installation complies with all local, state and national codes for the installation of equipment in hazardous locations.
- Refer to Control Drawing 1700004 for specific installation requirements.
- Do not install equipment approved for non-hazardous locations in a hazardous area.
- Do not install this equipment into a Zone 0 location.

Substitution of components is NOT PERMITTED and may impact intrinsic safety.

2.0.2 FM INSTALLATIONS



Class I, Division 1, Groups B, C, D, E, F, and G, T4 -40°C to $+85^{\circ}\text{C}$


Class I, Zone IIB+H₂, T4 -40°C to $+85^{\circ}\text{C}$ Type 4X; IP 66

Model LXT380 Transmitter is intended for installation in hazardous locations with Class I Division 1 or Class I Zone 1 classification. It is not intended to be installed in Zone 0 locations and must only be installed in ambient temperature conditions of $-40^{\circ}\text{C} \leq T_a \leq +85^{\circ}\text{C}$. Power connections into the LXT380 transmitter must be made with flame-proof conduit and cable glands certified for hazardous locations and compatible with Ex certified equipment. Additionally, connections between the LXT380 Transmitter and the B88 Barrier must be made with approved conduit and cable glands certified for hazardous locations.

- Ensure installation complies with all local, state and national codes for the installation of equipment in hazardous locations.
- Refer to Control Drawing 1700003 for specific installation requirements.
- Do not install equipment approved for non-hazardous locations in a hazardous area.
- Do not install this equipment into a Zone 0 location.
- Substitution of components is NOT PERMITTED and may impact intrinsic safety.
- Do not open housing when a hazardous or explosive atmosphere exists.

2.1 MOUNTING

The FCA380 panel is drilled with 4 x 0.265" holes, one at each corner, and is designed to use 1/4" -20 hardware or 6mm metric hardware.

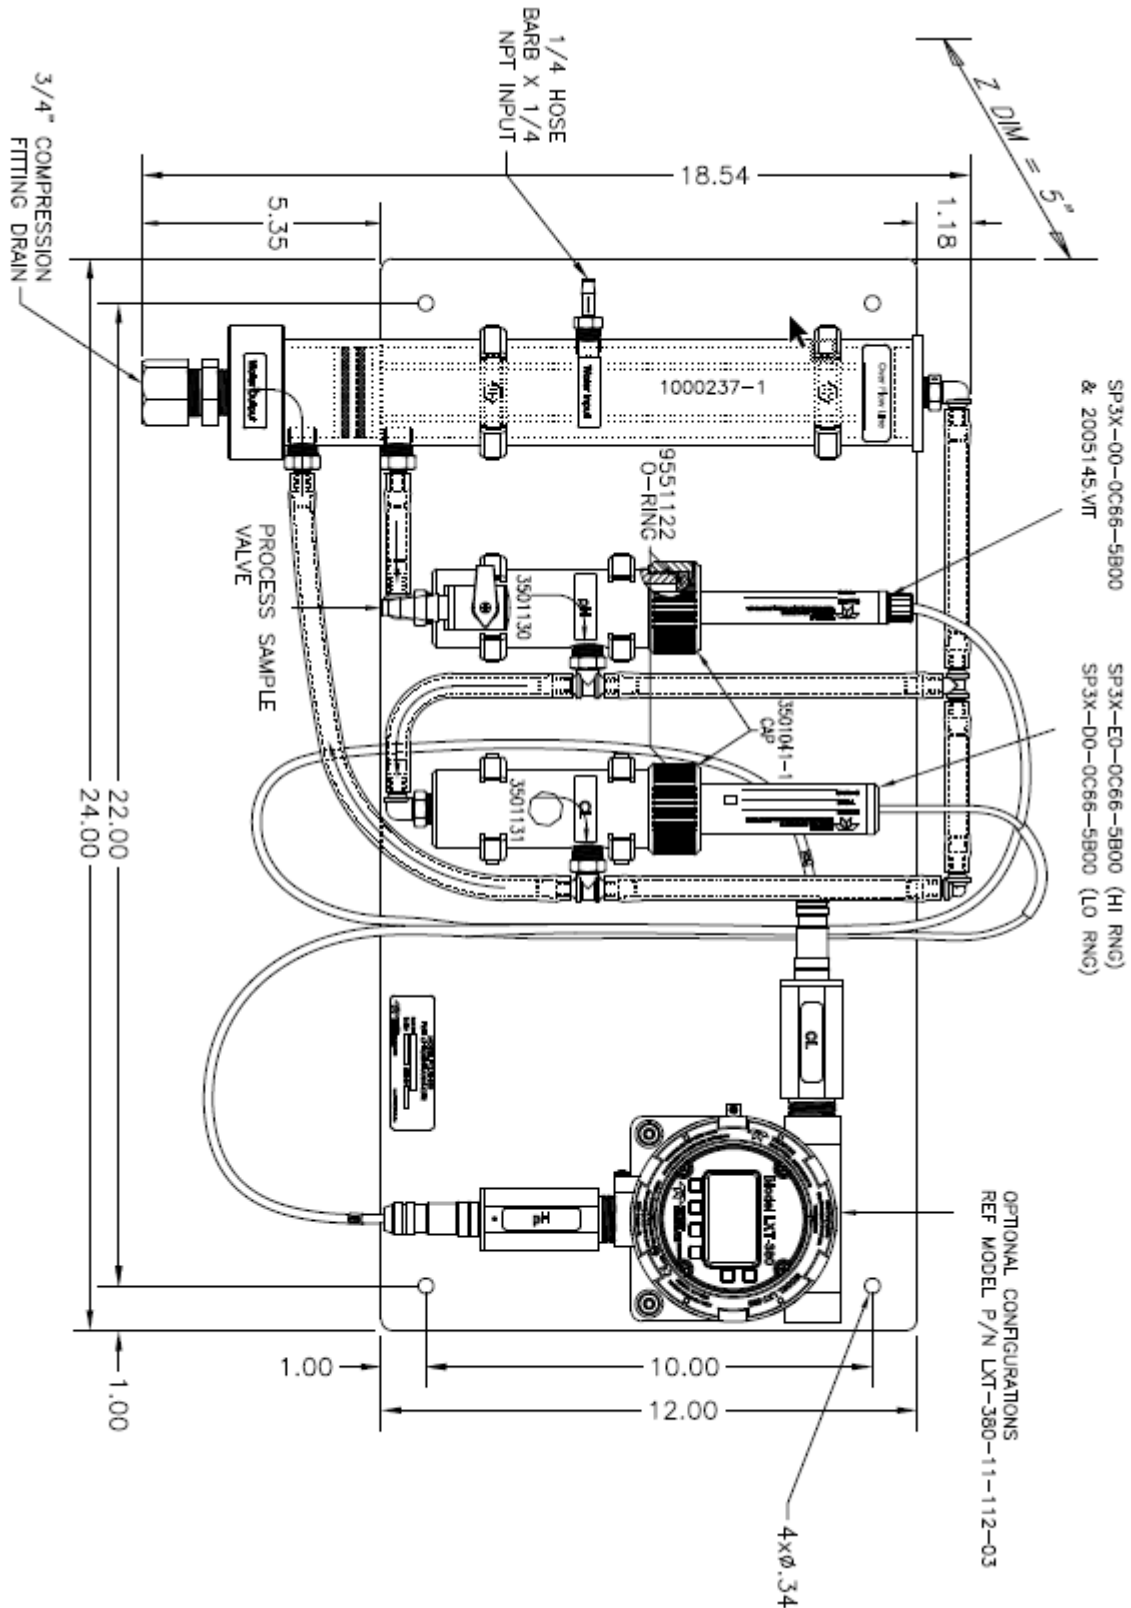

2.2 WIRING

The LXT380 installation consists of a flame-proof transmitter with enclosure; an attached barrier (ATEX/IECEX version) or an external flame-proof/intrinsically-safe energy limiting B88 Barrier and flame-proof seal (FM Approved version); and an Intrinsically-safe SP3X Sensor. Substitution of parts or unauthorized repairs are prohibited and will invalidate certification. Examples of unauthorized repairs include flame-path alteration or modification of flame-proof components. Omission of components, including but not limited to flame-proof conduit, flame-proof seals and stopping plugs is not permitted. Flame-proof stopping plug shall be tightened to a specified torque of 55Nm (41ft-lbs). Refer to local, state and national codes for specific installation requirements and refer to additional documents as necessary (NFPA33, NEC 500 and 516, IEC 60079-14).

Electrical wiring should only be conducted by qualified personnel. See the LXT380 wiring diagram in Figure 2.2.1

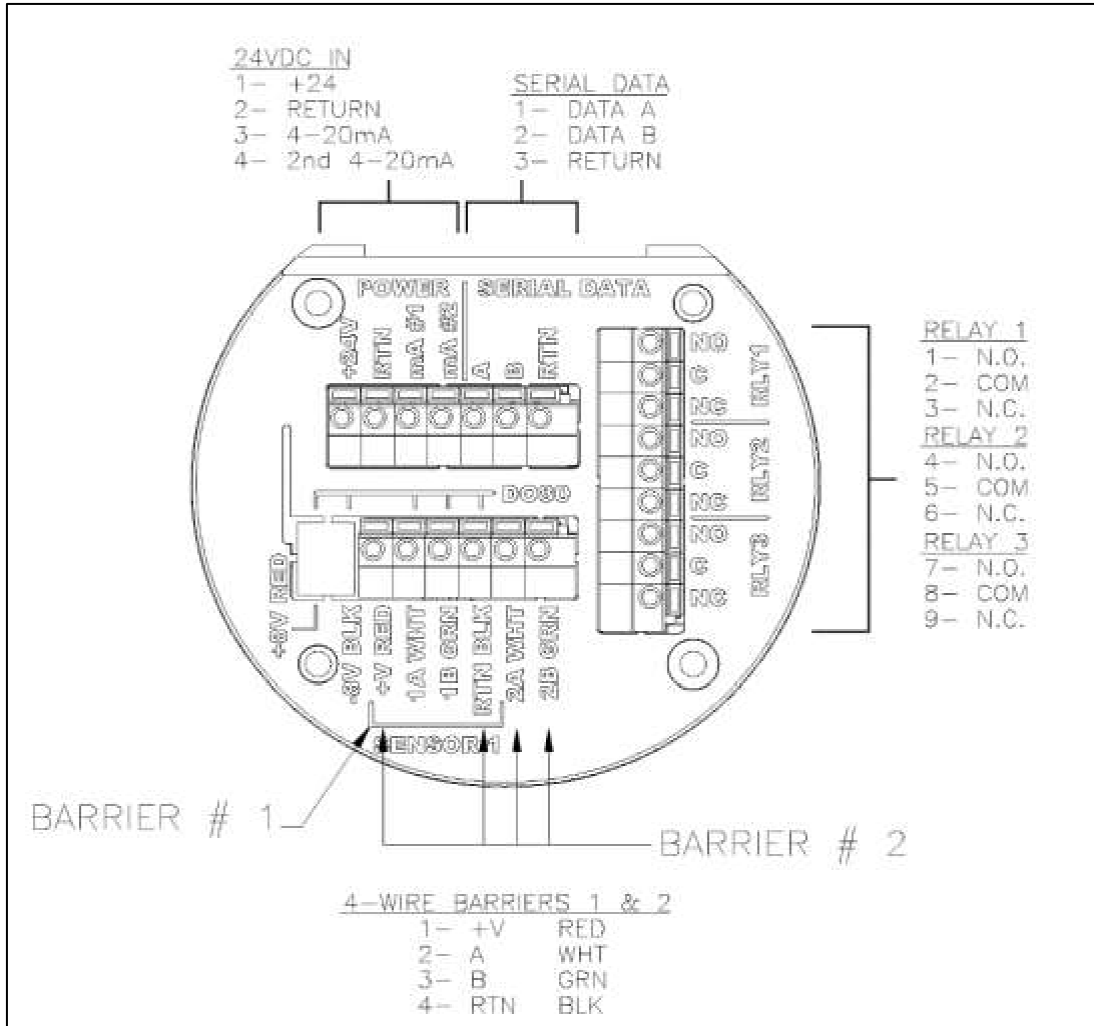





Figure 2.2.2 4-Wire Transmitter, 24VDC, MODBUS, Relays

	Warning: RISK OF ELECTRICAL SHOCK
	Disconnect Power before opening instrument.
	WARNING Electrical installation must be in accordance with the National Electrical Code (ANSI/NFPA-70), Canadian Electrical Code and/or any other applicable national or local codes.

2.2.1 WIRING, POWER

TAI recommends using a thermoplastic, outdoor sunlight resistant jacketed cable, wet location rated and ½” flexible conduit for general purpose applications. The power should be hard wired with a switch or breaker to disconnect the analyzer from the main power supply. Install the switch or breaker near the analyzer and label it as the Power Switch for the analyzer.

Field connections, including input power and user wiring is to be supplied via conduit suitable for the environment classification. Mount the enclosure and connect with conduit as per the conduit manufacturers recommendations. Pull wiring thru the conduit and attach to the terminals listed below. Tighten all joints and seal conduit as required to ensure compliance with installation requirements.

24VDC (4 wire configuration)

Attach the 24VDC power cable to terminals #1 and #2 as shown in Figure 2.2.2 and on the diagram inside of the LXT380 cover. Attach the 4-20 mA1 cable to terminals #3 (out) and #2 (return) single channel unit and attach the 4-20 mA2 cable to terminals #4 (out) and #2 (return) for a two channel instrument. Feed the cables through the gland fitting on the right hand side of the LXT380. Tighten the cable gland to provide a good seal to the cable. The instrument can be powered up at this point with no harm to the analyzer but it is best to wait until the sensor is installed.

2.2.2 WIRING, SENSOR

The Free Chlorine Sensor and the SP3X pH Sensor were connected to the FCA380 analyzer at the factory, no additional connections are necessary. Color coded connections for these sensors are shown in the wiring diagrams in Section 8.3 or on the inside cover of the LXT380 transmitter.

When replacing a sensor, attach the sensor wires as described on the diagram inside the LXT380 cover. Feed the sensor cable through the gland fitting on the left hand side of the LXT380. Do not use the same gland fitting for the AC power or Alarm/Relays. The green terminal strip connectors are detachable from the circuit boards. Remove the connector by pulling straight back from the circuit board.

2.2.3 WIRING, 4-20 MA OUTPUTS

Connect the 4-20 mA cable(s) to terminals #3 (out) for channel 1 and #2 (return) and to terminals #4 (out) for channel 2 and #2 (return).

2.2.4 WIRING, CONTACT RELAY OUTPUTS

The standard configuration has three 1 form C, 250 VAC, 10 Amp resistive maximum relays that can be wired either **normally open (NO)** or **normally closed (NC)**. The default configuration is set to use the relays as normally open. If the optional spray cleaner was ordered then one of the relays is used to control the cleaning cycle.

2.2.5 WIRING, SERIAL OUTPUT MODBUS RTU

Attach the sensor wires as shown in Figure 2.2.2 or as described on the diagram inside the LXT380 cover. Feed the sensor cable through the gland fitting on the left hand side of the LXT380. Do not use the same gland fitting for the sensors or Alarm/Relays. See MODBUS command register in [Appendix B](#).

2.3 PLUMBING

2.3.1 SAMPLE REQUIREMENTS

The constant head flow controller can adapt to changing sample flows between 10 and 80 gal/hr. (40-300 L/hr.)

Minimum flow: 10 gal/hr. (38 L/hr.)

Sample Activature: 1 to 30 psig (0.1 - 2 bar)

Temperature: 32° to 122°F (0° to 50°C)

2.3.2 CONNECTING THE INLET AND DRAIN FITTINGS

The FCA380 is intended for wall mounting only.

Sample Inlet:

A ¼" barbed fitting is provided for the sample inlet. If desired, a ¼" compression fitting can be used. The sample inlet is ¼" FNPT. Attach the feed water line to the Constant Head Flow Controller with an adjustable shut off valve. Adjust the flow so the sample water fills the tube and slightly overflows into the center tube to drain.

Sample Drain:

The sample drains through the ¾" FNPT hole at the bottom of the CHFC. Attach a ¾" fitting to a length of soft tubing and allow the waste to drain to open atmosphere. Do not restrict the drain line.

The sample can be introduced after the sensors have been calibrated and installed in the flow cells.

2.4 INSTALLING THE SENSORS

The FCA380 is supplied with the sensor cables pre-wired to the analyzer. The FCA380 instrument and sensors were calibrated at the factory and should be ready for use when assembled. However, changes may have occurred during shipping and storage requiring recalibration. (See Calibration section below)

The pH sensor mounts in the Flow Cell using an o-ring sealed flange/union mount with threaded locking cap. First remove the protective cap from the sensing end of the sensor and save it for future use, the cap contains a potassium chloride solution use care when removing the cap from the sensor. Insert the sensor into the flow cell. There is an o-ring seal inside the flange that seals against the face of the flow cell. Slide the sensor into the flow cell and then hand tighten the knurled compression cap to fix its position.

The Chlorine sensor is held in the flow cell with a union nut. **Slowly remove the protective yellow cap** from the sensor and save it for future use. (Pulling the cap off quickly may rupture the sensors membrane cap) Slide the sensor into the flow cell and hand tighten the compression cap.

3.0 OPERATION

This section provides a basic overview of the FCA380 Free Chlorine Analyzer. It covers physical and chemical influences on the measurement and the menu structure of the analyzer.

3.01 INFLUENCES ON THE MEASUREMENT pH VALUE

The FCS only measures the HOCl component of the total Free Chlorine. The HOCl proportion varies from 100% at pH 5.5 to 0% at pH 10, see Figure 3.1. The SP3X pH sensor provides automatic compensation for the pH dependent ratio of HOCl and OCl⁻ present in the water.



The PTFE membrane on the FCS rejects charged ions allowing only neutral molecules to pass through. Salts and other ionic substances are blocked by the membrane eliminating any influence on the measurement by changes in the conductivity of the sample. The HOCl portion of the free chlorine passes through the membrane to the cathode and is measured while the negatively charged hypochlorite ion, OCl⁻, portion is rejected by the membrane. The LXT380 analyzer uses the pH from the LXT380 pH sensor to calculate the OCl⁻ value. The measured value and the calculated value are combined and displayed as the ppm of Free Chlorine.

The DPD calibration method measures the Free Chlorine by buffering the sample to pH 6.3, thereby converting the entire amount of chlorine to HOCl and then measuring this HOCl component. The pH compensation algorithm in the LXT380 Transmitter is designed to match this method. The highest accuracy is attained with calibrations performed at neutral pH values and higher chlorine concentrations. The accuracy of the compensation decreases when the pH is above pH 8 since there is little actual HOCl to measure and a large compensation to perform.

The FCA380 uses the dissociation constant (7.49) for hypochlorous acid, HOCl, to compensate the free chlorine measurement. The mV signal from the free chlorine sensor is divided by the slope of the sensor to yield a ppm value. This is the HOCl fraction of the Free Chlorine. The pH electrode sends a value to the analyzer that determines the value of the dissociation constant at that pH, varying from 1.00 at 5.5 pH to 0.00 at 10 pH. The HOCl ppm value is divided by the dissociation constant to yield the Free Chlorine concentration, HOCl + OCl⁻. The dissociation value is displayed in the INFO>COMP screen.

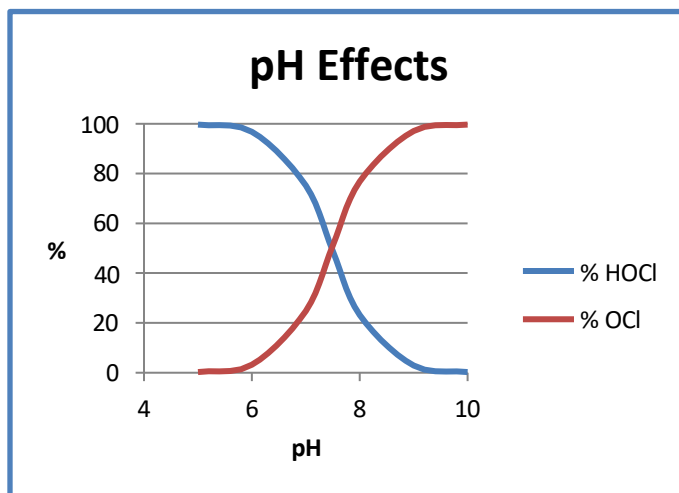


Figure 3.1

3.02 INFLUENCES ON THE MEASUREMENT FLOW

The FCS consumes chlorine to produce the signal. The area near the sensing tip will become depleted of chlorine without adequate flow to replenish the sample. The sensor requires a minimum velocity of 0.5 ft./sec past the membrane. Below this value the sensor will indicate a lower concentration than the actual value. Higher flow rates have little to no effect on the measurement. See Figure 3.2.

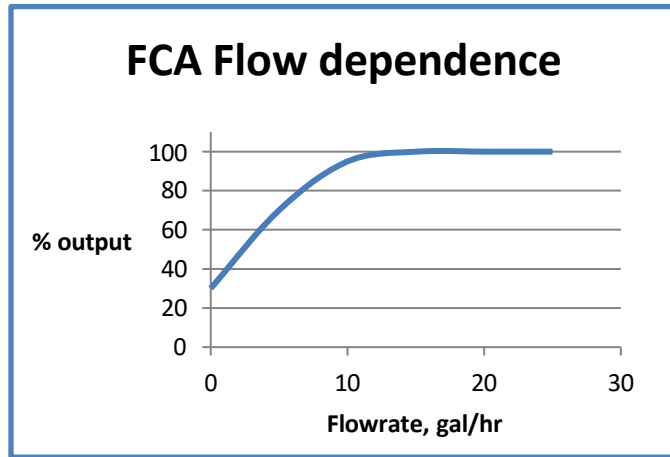


Figure 3.2

3.03 INFLUENCES ON THE MEASUREMENT TEMPERATURE

Temperature variation influences the FCS by changing the permeability of the PTFE membrane and the Nernstian response of the sensor. Combined these changes account for a change of about 4% / C°. The change follows the temperature, as the temperature increases the output of the sensor increases, as the temperature drops the output drops. The FCA380 automatically compensates for the changes. The temperature sensor is located inside the free chlorine sensor and it has a response time of several minutes. Rapid changes of temperature will introduce an error until the sensor has equilibrated to the new temperature. Calibration should be done close to the process temperature for the highest accuracy. See fig. 3.3.

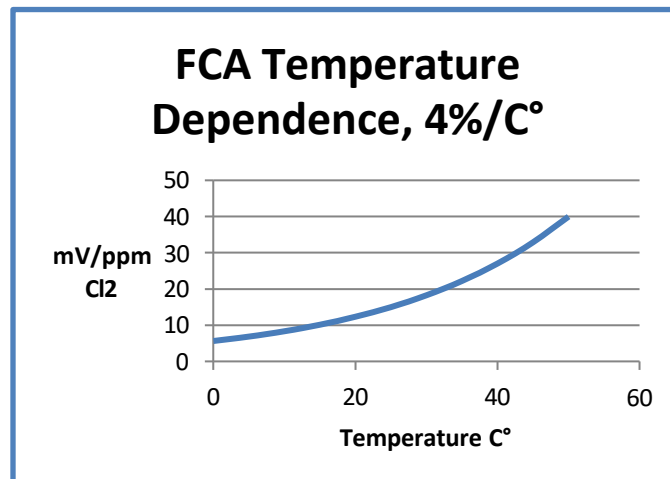


Figure 3.3

3.1 KEYS

The functions associated with each key are displayed on the screen, above the Selection Adjustment Keys and to the left of the HOME and BACK keys. **Activate any Selection Adjustment Key twice within one second to enter the HOME Menu Screen. (Note: Activation of any keys are magnetic. Use the magnetic tip of screwdriver supplied with the product for activation (Screwdriver with magnetic tip P/N 9680044.1))**



3.1.1 HOME/EXIT KEY

The **HOME key** performs two functions, it selects which Home Screen is displayed and it returns from the active screen to the HOME Menu Screen from anywhere inside the menu structure.

Three Display screens are available: (Activate BACK Key until a single channel is displayed then the HOME Key)

1. **DATA SCREEN:** Displays the measurement type, numerical value, engineering Units, % Output of the 4-20 mA channel and temperature.
2. **mV SCREEN:** Displays the measurement type, the sensor's raw millivolt Value, % Output of the 4-20 mA channel and temperature.
3. **GRAF SCREEN:** Displays a Graphical representation of the 4-20 mA channel % Output, the measurement type, the engineering units, and temperature. Only one of the three graphical display styles is available through the HOME key, either the Bar, Gauge or Line display. Choose which style will be displayed in the Graph Menu. (pathway to Graph Menu: CONFIG → XMTR → LCD → Graph menu)

Each of the above screens also displays the condition of the optional Alarm Relays, black if energized and white if de-energized.

The HOME key changes to the **EXIT key** in the HOME Menu Screen, activating EXIT prompts the user to "Save Changes" YES/NO when exiting the HOME Menu. YES applies any changes made in the menus, NO exits the HOME Menu without applying any changes made in the menus.

3.1.2 BACK/HOLD KEY

The **BACK key** changes the screen to the previously displayed screen when inside a menu, it moves BACK one screen. On a dual channel transmitter it toggles between the PV1, PV2 and Dual Channel Screens. The **HOLD key** toggles the output HOLD function ON/OFF in the MENU HOME screen.

3.1.3 SELECTION ADJUSTMENT KEYS

The (4) Selection/Adjustment keys allow navigation and numerical adjustments to be made in the MENUS. **To enter the HOME Menu screen activate any of the Selection/Adjustment keys twice within one second.** The various Menu choices and adjustment tools are displayed above the buttons once inside the MENU.



3.1.4 ALPHA NUMERIC ENTRY

The **LABEL** and **PASSWORD** (Caps and Numbers only) Menus allow alphanumeric entry. Entry is accomplished by scrolling through the alphanumeric list with the ▲ (forward) and ▼ (backwards) arrows to the character of choice and then moving to the NEXT digit. Activating and holding the ▲ or ▼ keys will initiate two speed auto scrolling. The character set is sequentially listed below. The first character in the set is an empty space.

! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ' a b c d e f g h i j k l m n o p q r s t u v w x y z { | } → ←

3.2 MENU STRUCTURE

Double tap any Selection/Adjustment key to enter the HOME Menu Screen. Five menu choices will appear, **CAL**, **CONFIG**, **INFO**, **SIM** and **HOLD**. Each of the Menus is detailed below.

3.2.1 HOLD (OUTPUT HOLD)

Activating the **HOLD Key** activates the HOLD function, HOLD is ON, displayed.

- ❖ Freezes the 4-20 mA output at the last value prior to activation
- ❖ Freezes optional Alarm Relays in the current state
- ❖ While in the HOLD mode the % Output display toggles between the last value and HOLD

Activating HOLD again turns the hold function off, Hold is OFF, displayed. The HOLD function remains ON until it is turned OFF. (See Time Out in CONFIG>XMTR>OUTPUT>HOLD)

3.2.2 CAL (CALIBRATION MENU)

Four options are available, **AUTO**, **STAND**, **MANUAL** and **TEMP**. On dual channel instruments choose Sensor 1 or Sensor 2 when prompted.



The first screen asks, "Is this a New Sensor, YES / NO". If YES the calibration history from the previous sensor is cleared from memory and a new register is started, if NO then the calibration is written to the memory stack, (3) sets of data are stored.

- ❖ **AUTO** is a two point calibration. The calibration proceeds in two steps, Auto Cal 1 is an offset calibration and Auto Cal 2 is a slope calibration. Auto Cal provides automatic solution recognition of the calibration solutions used for each measurement in accordance with the following list:
 1. pH Calibration Buffers (US Standard), pH 4.01, pH 7.00 and pH 10.00 (see [Appendix A](#))
 2. Free Chlorine: Zero ppm (Sodium sulfite, Na₂SO₃ in water), Chlorinated water, DPD Tested

Any two solutions can be used for AUTO calibration however if solutions other than those listed above are used for calibration then the calibration values must be entered manually.

- ❖ **STAND** is standardization, a single point calibration. Standardizations are typically used to adjust the process reading to agree with a laboratory determined "grab sample" reading.
- ❖ **MANUAL** is a data entry screen. Manual calibration allows the user to enter a concentration with the corresponding mV value and a slope for an electrode. Laboratory generated calibration data for an electrode can be input to a remote analyzer where calibration is difficult or impractical.
- ❖ **TEMP** allows the displayed temperature to be trimmed to agree with actual process temperature.





3.2.3 CONFIG (CONFIGURATION MENU)


Four options are available in the Configure Menu, **XMTR**, **SENSOR**, **LOAD DEFAULT** and **Dampen**.

❖ **XMTR** enters the Transmitter Configuration menu.

- **LCD** access the Display Configuration Menu
 - **SETUP** adjust screen lighting characteristics
 - **Temp.** Choose °C or °F
 - **CONT** adjust Contrast
 - **BACK LIGHT** adjust Backlight Timeout, from always ON to OFF after 10 minutes
 - **GRAPH** provides the choice of which Graph style is displayed on the Home screen.
 - **LINE**, Moving value, vertical scale set to 0-100% of the 4-20 mA output and user defined time scale
 - **GAUGE**, Current reading 0-100% of 4-20 mA range
 - **BAR**, Current reading 0-100% of 4-20 mA range
 - **LABELS**
 - **TAG**, Enter up to 2 lines x 16 characters, example, Name, tag #... Displayed in INFO screen
 - **TAG ON**, Turn TAG ON/OFF, adds TAG to Main Display Sequence, DATA → mV → GRAF → TAG → DATA
 - **POP UP**, Turns ON/OFF, the double tap HOME Screen pop up memo
 - **SENSOR**, Enter up to 2 lines x 16 characters
- **OUTPUT** access the Output Configuration Menu
 - **4-20 mA** configure 4-20 mA output (PV or Temp or More)
 - **RANGE** Enter 4 mA value and 20 mA value
 - **MORE**
 - **CAL** Trim 4.00 mA output and 20.00 mA output
 - **FAULT** Choose fault condition 3.5 mA, 22 mA, None
 - **RELAY**
 - **RLY1,2,3** Choose relay type:
 - **Alarm**, enter the Set point ON, Set Point OFF, Expiration time, Delay ON and Delay OFF times and the State, **energize**: changes state from de-energized to energized on alarm.
 - **Timed**, Enter Period, Duration times and Hold On/Off
 - **Fault**, No input required, relay condition changes from energize to de-energize.
 - **Disable**, Inactivates relay and removes the relay button from the HOME Screen display.

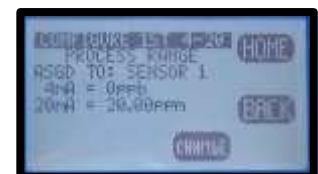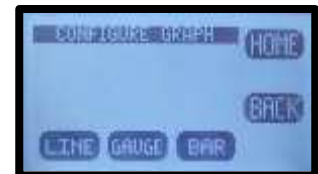

- **HOLD**, Freezes outputs at current value and locks relays in their current state.
 - **Hold Timeout**, Removes HOLD after a certain period of time, default setting: No Timeout, selections include 15 minutes, ½ hour, 1 hour
- **SERIAL MODBUS** configure serial output,
 - **ADDRESS**, enter address: 001 to 247
 - **BAUD**, Choose baud rate, default 9600
 - **FORMAT**, set serial data format, default value: 8N1, 8 bit, no parity bit, 1 stop bit
- **PASSWD** Enter 4 character password to protect access to MENU Level, CAL Menu, CONFIG Menu and SIM Menu (simulate). Each level can be turned ON or OFF and can have a unique password.
 - **MENU** ON/OFF _____ Locks Main Menu
 - **CAL** ON/OFF _____ Locks CAL and CONFIG
 - **CONFIG** ON/OFF _____ Locks CONFIG
 - **SIM** ON/OFF _____ Locks SIM and CONFIG
- ❖ **SENSOR** enters the sensor configuration menu.
 - **Choose SENSOR 1 or 2**
 - **TYPE**, Allows LXT380 transmitter to configure the SP3X sensor. For use only when switching the measurement electrode type in an SP3X sensor, i.e. for a pH electrode to a pION electrode. Select Sensor Type: pH, ORP, DO_2 , NH_3 , NH^+ , Br^- , Ca^{++} , Cl^- , Conductivity, Resistivity, Cu^{++} , CN^- , F^- , NO^- , K^+ , Ag^+ , Na^+ , S^-
 - **T COMP**, Enter % temperature compensation per degree: pH, 0.33%, Free Chlorine 4%,
 - **COMP** Dual Channel Only, Sets compensation type, (effect of ch2 on ch1): **Dissociation** (pKa), NH_4^+ , Free Chlorine, HF, S^{-2} , **Interference**, X ppm Sensor 2 = 1 ppm Sensor 1, **Percentage** % change per pH.
 - **Qty of SENSORS**, Choose 1 or 2
- ❖ **Load Default** resets all Menus to factory default configuration.
- ❖ **Dampen**, sets the number of measurements averaged for the displayed PV

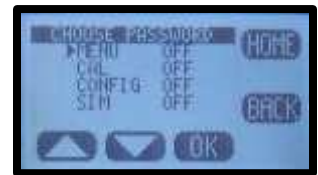

3.2.4 INFO (INFORMATION MENU)

The Information Menu provides two choices,

- ❖ **Transmitter Screen**, details the Name, Power type, Serial #, Firmware version and the output configuration(s).
- ❖ **Sensor Screen**, details the Name, Part #, Serial # and three sets of Calibration data.
- ❖ **COMP**, displays the pKa, the sensor affected and the dissociation Factor



3.2.5 SIM (SIMULATION MENU)

The Simulation menu allows the Input or Output signals to be simulated.

- ❖ **SYSTEM** allows the Input to be simulated. Two choices are available, FIXED is a fixed value, RAMP varies the signal across the 4-20 mA range, from the lowest value to the highest value and back, activating and deactivating relays if present. The RAMP has two adjustments the Ramp period, 30 seconds to 2 minutes and Duration; 1 cycle, 5, 10, 20, 30 minutes.
- ❖ **RELAYS** allows individual relays, #1, #2, and #3 to be activated and deactivated
- ❖ **4-20 mA** allows the output to be simulated from 4.00 mA to 20.00 mA.



3.2.6 FAULT SCREENS

Fault	Definition	Recommendation
Memory Error	AN ERROR WAS FOUND WITH THE MEMORY OF THE MICROCONTROLLER	RETURN TO FACTORY FOR SERVICE
Input Voltage OOT	POWER IS OUT OF TOLERANCE	CHECK WIRING TO THE TRANSMITTER
+12V OOT	ONBOARD 12V IS OUT OF TOLERANCE	RETURN TO FACTORY FOR SERVICE
+3.3V OOT	ONBOARD 3.3V IS OUT OF TOLERANCE	RETURN TO FACTORY FOR SERVICE
Loss of Comm	COMMUNICATION WITH THE SENSOR WAS LOST	CHECK WIRING TO THE SENSOR
No Sensor	NO SENSOR WAS FOUND AT START-UP	CHECK WIRING TO THE SENSOR
Cal Failed	SENSOR CALIBRATION FAILED	1) CLEAN SENSING TIP 2) VERIFY SOLUTIONS 3) DO NOT LEAVE UNATTENDED 4) RE-CALIBRATE
Relay 1 Expired	RELAY 1 TIME ON EXPIRED	1) CHECK SENSOR OP 2) CHECK AUX EQUIP A) PUMPS B) TANKS
Relay 2 Expired	RELAY 2 TIME ON EXPIRED	1) CHECK SENSOR OP 2) CHECK AUX EQUIP A) PUMPS B) TANKS
Relay 3 Expired	RELAY 3 TIME ON EXPIRED	1) CHECK SENSOR OP 2) CHECK AUX EQUIP A) PUMPS B) TANKS

3.3 OUTPUT CONFIGURATION GUIDE

Install and wire the LXT380 Transmitter as described in Sections 2.1 and 2.2 above.

Connect the sensor to the transmitter as described in Section 2.2 above.


Supply power to the Model LXT380 transmitter.

Verify the proper measurement type is displayed, pH and FCl₂. The sensor automatically uploads the measured parameter, the calibration data and the range of measurement to the transmitter. The default configuration of the 4-20 mA output is the range of the sensor, 0-14 pH for pH sensors and 0.00 -20.00 ppm for Free Chlorine. To change the 4-20 mA range, follow the instructions in Section 3.3.1 below.



3.3.1 CONFIGURE 4-20 MA OUTPUT RANGE

- ❖ Double activate any key except the HOME key to enter the HOME Menu. Follow the path below to set the 4-20 mA range.
- ❖ HOME Menu → Activate CONFIG → XMTR → OUTPUT → 4-20 (1)(2) → PV or TEMP
- ❖ Activate CHANGE to enter New Values.
- ❖ Choose 4 mA value, activate OK
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK→Back
- ❖ Choose 20 mA value, activate OK,
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK→Back
- ❖ Activate BACK to return to the CONFIGURE 4-20 mA screen or HOME to return to the HOME Menu screen.

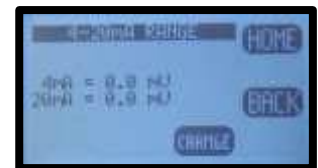


3.3.2 CONFIGURE 4-20 MA FAULT CONDITION AND CAL

- ❖ In the CONFIGURE 4-20 mA screen, Activate **MORE** → **FAULT** or
- ❖ Choose **Low Fault 3.5 mA** or **Hi Fault 22 mA** or **NONE**, (default setting **NONE**), Activate OK
- ❖ Activate BACK → **CAL**, connect DVM to 4-20 mA line, Activate 4.00 mA then adjust value to the DVM reading, Activate 20.00 mA and adjust value to the DVM reading. The 4-20 mA output is calibrated.

3.3.3 CONFIGURE ALARM RELAYS (RELAYS OPTIONAL)

- ❖ HOME Menu → Activate CONFIG → XMTR → OUTPUT → RELAYS→RLY1
- ❖ Choose the **ALARM**, **TIMER**, **FAULT** or **DISABLE** mode for Relay 1
- ❖ **ALARM** Displays:
 - **SET POINT ON**: The Process Variable Value that activates the relay.
 - **EXPIRATION**: Enter a time that should not be exceeded before the PV should have changed enough to activate the OFF set point. At the Expiration time the relay is deactivated and a Fault condition is initiated. Fault: Relay 1 Time expired: Cause: Loss of reagent, failed sensor
 - **Delay ON**: The amount of time the PV must remain above/below the set point before the relay activates.
 - **SET POINT OFF**: The Value of the process variable that deactivates the relay.
 - SET POINT OFF > Set Point → Low Set Point
 - SET POINT OFF < Set Point → Hi Set Point

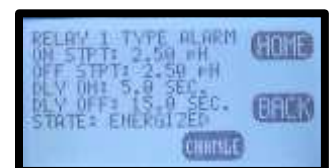

- **Delay OFF:** The amount of time the PV must remain above/below the hysteresis point before the relay deactivates.
- **STATE: Energize** (relay is energized on activation)/**De-energize** (relay is de-energized on activation)
- ❖ **TIMER** activates the relay periodically for a specific duration, user configured period and duration
- ❖ **FAULT** sets the relay condition to a de-energize state and NC relay closes in response to a Fault condition.
- ❖ **DISABLE** turns off the relay and removes it's icon from the HOME screen

Setting up an Alarm Relay


- ❖ Choose **ALARM**
- ❖ Activate **CHANGE** to enter new values
- ❖ Choose ON Set Point, Activate OK
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK, activate BACK (Min –Max values indicate the range of acceptable values)
- ❖ Choose Expiration, Activate OK,
- ❖ Choose time from drop down menu using ▲ or ▼, activate OK, activate BACK
- ❖ Choose OFF Set Point, Activate OK
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK, activate BACK
- ❖ Choose Delay ON, Activate OK
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK, activate BACK
- ❖ Choose Delay OFF, Activate OK
- ❖ Enter value using ▲ or ▼ and NEXT to move to the next digit, activate OK, and activate BACK when done to exit Relay 1.
- ❖ Repeat for Relay 2 and Relay 3.

3.3.4 EXIT MENUS AND RETURN TO MAIN DISPLAY

- ❖ Activate HOME Key to return to the Home Menu Screen
- ❖ Activate Hold to turn OFF Hold
- ❖ Activate EXIT Key to exit the menu
- ❖ "Save Changes?" activate YES
- ❖ Choose Display Mode, **DATA**, **mV** or **GRAF** by activating selection Key. The selection key displays which screen will be displayed next.
 - The type of graphical display used, Line, Bar or Gauge is selected in CONFIG → XMTR → LCD → GRAPH → LINE, GAUGE, BAR

3.3.5 SENSOR START UP

All sensors are supplied with protective caps over the sensing end. Remove the cap(s) from the sensor before installing in the process. All sensors were calibrated at the factory before shipment, no calibration should be necessary before use. Allow the sensor to equilibrate to the process solution conditions for ½ hour before verifying the reading against a grab sample. If calibration is required follow the instruction in Section 4.0 below.

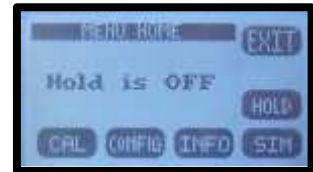


3.4 USER SELECTABLE OPTIONS

3.4.1 SCREEN LIGHTING

LED back lighting is available on AC and DC powered instruments only.

Contrast can be adjusted for optimal viewing. The Backlight can be adjusted to timeout after a set period of time or remain on.

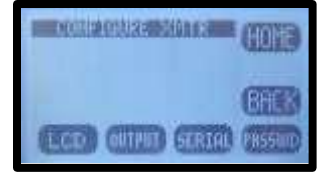

Location: CONFIG → XMTR → LCD → Set Up → CONT, BACK LIGHT

3.4.3 GRAPHICAL DISPLAY

There are three graphical display choices:

- ❖ **LINE**, The Line graph is the value of the process variable displayed over some time period with the 4-20 mA range as the maximum/minimum values.

The Time scale is the amount of time displayed across the full screen. Choices include:

Full Screen Period	15 minutes	1 hour	12 hours	1 day	2 days
Sample Rate (1 point every)	10 seconds	40 seconds	8 minutes	15 minutes	30 minutes

- ❖ **GAUGE**, Live reading displaying 0-100% of 4-20 mA range. The Alarm Relay number(s), #1, #2 and #3 mark the respective set points on graph.
- ❖ **BAR**, Live reading displaying 0-100% of 4-20 mA range. The Alarm Relay number(s), #1, #2 and #3 mark the respective set points on graph.

Activating **OK** after selecting a Graphical Display will exit the menu structure and return to the Main Display.

Location: CONFIG → XMTR → LCD → GRAPH

3.4.4 TAG TRANSMITTER NAME

Two 16 character lines are available for naming the transmitter, Upper and Lower case characters, Numbers and Punctuation are available. The information entered will be displayed in the INFO screen and optionally in the Main display sequence if activated in the TAG ON menu. The character set is listed below sequentially; the first character in the set is an empty space.



! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ' ` a b c d e f g h i j k l m n o p q r s t u v w x y z { | } → ←

Entry is accomplished by scrolling through the alphanumeric list with the ▲ (forward →) and ▼ (backwards ←) arrows to the character of choice and then activating **NEXT** to advance the cursor to the next digit. Activating and holding the ▲ or ▼ keys will initiate two speed auto scrolling. Activate **BACK** to exit the screen.

Location: CONFIG → XMTR → LCD → LABELS → TAG



3.4.5 SENSOR NAME

Two 16 character lines are available for naming the Sensor, Upper and Lower case characters, Numbers and Punctuation are available. The information entered will be displayed in the INFO screen. Entry is accomplished by scrolling through the alphanumeric list with the ▲ (forward →) and ▼ (backwards ←) arrows to the character of choice and then activating **NEXT** to advance the cursor to the next digit. Activating and holding the ▲ or ▼ keys will initiate two speed auto scrolling. Activate **BACK** to exit the screen.

Location: CONFIG → XMTR → LCD → LABELS → SENSOR

3.4.6 PASSWORD PROTECTION

PASSWD Enter 4 character password to protect access to MENU Level, CAL Menu, CONFIG Menu and SIM Menu (simulate). Each level can be turned ON or OFF and can have a unique password. Upper Case Characters and Numbers are available for use.

Place the cursor in front of the level to be changed and Activate **OK**. Move the cursor to **ON** and activate **OK** to change the password status from OFF to ON.

Entry is accomplished by scrolling through the alphanumeric list with the ▲ (forward →) and ▼ (backwards ←) arrows to the character of choice and then activating **NEXT** to advance the cursor to the next digit. Activating and holding the ▲ or ▼ keys will initiate two speed auto scrolling.



- **MENU** ON/OFF _ _ _ _ Locks Main Menu
- **CAL** ON/OFF _ _ _ _ Locks CAL and CONFIG
- **CONFIG** ON/OFF _ _ _ _ Locks CONFIG
- **SIM** ON/OFF _ _ _ _ Locks SIM and CONFIG

In the case of a **Lost or Forgotten password** enter **MSTR** to access the screen.

Location: CONFIG → XMTR → PSSWD

4.0 CALIBRATION

The Model LXT380 transmitter provides three methods of calibration:

4.0.1 AUTO CALIBRATION DESCRIPTION

Auto calibration is the primary calibration method for all measurements. AUTO calibration automatically recognizes the calibration solution the sensor is in and proposes the actual temperature compensated value for acceptance. AUTO calibration can be a single point or two point calibration. A single point calibration sets the zero point or offset value of the sensor. The second calibration sets the slope or span of the sensor.

When the AUTO key Cal 1 is activated the transmitter displays the PV (Process Variable) and the associated mV signal from the sensor. When the reading has stabilized a calibration value is AUTOMATICALLY proposed, i.e. 0.00 mV 7.00 pH for pH, 0.00 mV 0.00 ppm for Free Chlorine. **The user is prompted to accept the proposed calibration value or enter and accept another value.** Once Cal 1 is accepted the user is ask to continue to Cal 2, yes/no. If yes, then a second calibration value is proposed when the sensor has stabilized in the second calibration solution. Accept the value and the calibration is complete.

At the end of each calibration the Offset and Slope are displayed in the respective units, pH, mV, ppm.

4.0.2 STANDARDIZE CALIBRATION DESCRIPTION

A Standardize Calibration is a single point calibration where the transmitter's reading is adjusted to agree with a solution of known value, either a calibration standard or a grab sample with a laboratory determined value. In many cases the constituents and the activateure and temperature of the process solution are very different from the calibration solution. In these cases, once the sensor has equilibrated to the process environment, the Zero Point or Offset value may have shifted from the original calibration point. Standardization allows for correction of this type of offset.

When the STAND key is activated, the user is prompted to ENTER VALUE. The user enters the pH or Chlorine value they want the transmitter to read and activate OK. The user is then prompted to accept the value, yes/no, and the calibration is complete. Standardizations are single point calibrations. It changes the Offset value in a pH calibration. **It changes the Slope value in a Free Chlorine calibration. It is the primary calibration for Free Chlorine.** Enter the Free Chlorine value determined by a DPD test on the process water.

At the end of each calibration the Offset and Slope are displayed in the respective units, pH, mV, ppm.

4.0.3 MANUAL CALIBRATION DESCRIPTION

Manual calibration allows the user to enter calibration data for an electrode into the transmitter without performing a calibration. A MANUAL Calibration requires the entry of three pieces of data, (1) A **concentration** with the (2) **corresponding mV** value and (3) a **slope** for the electrode. This allows laboratory generated calibration data for an electrode to be entered in a remote analyzer where calibration is difficult or impractical.



The pictures show a Manual Calibration for a 0-20ppm Free Chlorine sensor using the default values of 0.00 ppm = 0.00 mV and 15 mV/ppm.

Example: MANUAL Calibration for a pH electrode

1. Calibrate the pH electrode in the laboratory
2. Record the mV value of some pH Standard, pH 7.00 buffer = 6.8 mV (any pH – mV pair will work)
3. Calculate and Record the slope of the electrode, -58.2 mV/pH
4. Install the electrode into the field mounted sensor
5. **Activate MANUAL** and enter the pH value, 7.00 pH, **activate mV** and enter the corresponding mV value, 6.8 mV, **activate OK**, Accept Offset?, **activate YES**, enter slope -58.2 mV/pH, **activate OK**, Accept Slope?, **Activate YES**
6. The Calibration is complete, the Offset and Slope values are displayed, **activate OK** to exit.



4.1 PH CALIBRATION PROCEDURES

AUTO Calibration recognizes pH 4.01, pH 7.00 and pH 10.00 buffer solutions for automatic, temperature compensated calibrations. Any calibration solutions can be used but the pH value will have to be entered manually. Follow the steps below to accomplish a pH calibration. Example uses pH 7.00 and pH 4.01 buffers.

4.1.1 AUTO CAL USING PH 4.01, 7.00, 10.00 BUFFERS

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes erases CAL Log in INFO, NO adds CAL to existing Log)
Activate Yes/NO	Place Sensor in CAL Solution (use pH 7.00 buffer)
Activate AUTO then CAL 1	STABILIZING, 7.00 pH x.x mV, 7.00 pH corrected Accept Cal?
Activate YES	CAL1 Value 7.00 pH, Continue to CAL2? Move sensor to 4.01 pH buffer solution
Activate YES	STABILIZING, 4.00 pH xxx.x mV, 4.00 pH corrected Accept Cal?
Activate YES	OFFSET: 7.00 pH x.x mV, SLOPE: -59.16 mV/pH (data written to Log)
Activate OK	Calibration complete
Activate HOME	Hold is ON
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

4.1.2 AUTO CAL USING OTHER PH BUFFERS

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes erases CAL Log in INFO, NO adds CAL to existing Log)
Activate YES/NO	Place Sensor in CAL Solution
Activate AUTO then CAL 1	STABILIZING, 6.86 pH 8.2 mV, 7.00 pH corrected Accept Cal?
Activate NO	Enter CAL 1 Value
Activate ▲ ▼ NEXT	6.86 pH (use arrows and NEXT to enter pH Buffer value)
Activate OK	6.86 pH, 8.2 mV, Accept this Value
Activate YES	CAL 1 Value 6.86 pH, Continue to CAL 2? (Place Sensor in 2 nd calibration buffer)
Activate YES	STABILIZING, 9.18pH 135.6 mV, 10.00 pH corrected Accept Cal?
Activate NO	Enter CAL 2 Value
Activate ▲ ▼ NEXT	9.18 pH (use arrows and NEXT to enter pH Buffer value)
Activate OK	9.18 pH, 135.6 mV, Accept this Value
Activate YES	OFFSET: 6.86 pH 8.2 mV, SLOPE: -59.16 mV/pH (data written to Log)
Activate OK	Calibration complete
Activate HOME	Hold is ON
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

4.1.3 STANDARDIZE

Leave the sensor in the process solution, take a grab sample from the process and determine the pH or place sensor in a calibration standard solution.

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes, erases CAL Log in INFO, NO adds CAL to existing Log)
Activate NO	Place Sensor in CAL Solution (or leave in the process solution)
Activate STAND	Enter Value
Activate ▲ ▼ NEXT	xx.xx pH (use arrows and NEXT to enter process pH value)
Activate OK	xx.xx pH, xxx.x mV, Accept Value?
Activate YES	OFFSET: xx.xx pH x.x mV, SLOPE: xx.xx mV/pH (this data written to Log)
Activate OK	Back to Cal Menu
Activate HOME	Hold is ON (Activate HOLD to turn off Hold)
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

4.2 FREE CHLORINE CALIBRATION PROCEDURES

AUTO Calibration is an awkward calibration for the Free Chlorine sensor. It is the only way to enter the actual zero potential of the free chlorine sensor. The Slope calibration "Cal 2" is best accomplished in the Standardized menu, it is much easier and more straightforward.

AUTO Cal recognizes 0.00 ppm Free Chlorine solutions in Cal 1. The Zero point calibration is very consistent for a Free Chlorine sensor and should only be done after rebuilding or replacing the sensor. To perform a zero calibration either run chlorine free water through the flow cell or remove the sensor from the flow cell and place it in a beaker of dechlorinated water. The zero point calibration will take about an hour for a new sensor or rebuilt sensor. Most sensors will burn down to a value of 0.1-0.2 mV, at this point accept the calibration and proceed to Cal 2. Cal 2 sets the slope of the sensor. It is accomplished by setting the ppm value of the instrument to agree with a DPD tested value of the water flowing through the FCA380 Analyzer. The analyzer will suggest a corrected value of 0.00 ppm, 5.00 ppm or 10.00 ppm, which will not be correct unless that happens to be the actual value of the sample water, Activate NO and enter the value from the DPD test. The nominal values for the High Range FCL (0-20ppm) slope are 15 mV/ppm ± 5 mV. The nominal values for the Low Range FCL (0-5ppm) slope are 60 mV ± 20 mV.

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes erases CAL Log in INFO, NO adds CAL to existing Log)
Activate Yes/NO	Place FC Sensor in CAL 1 Solution (use 0.00 ppm solution) or go to CAL 2
	To perform zero CAL activate CAL 1, to skip the zero Cal activate CAL 2
Activate AUTO then CAL 1	STABILIZING, 0.00 ppm, xxx.x mV, Accept Cal?
Activate YES	CAL 1 Value 0.00 ppm, 0.2 mV, OK?
Activate OK	Feed chlorinated water to the FCLXT380, run DPD test when the reading stabilizes. If the calibration times out and returns to the Home Screen, Activate AUTO and select Cal 2.
Activate YES	Continue to CAL2?

Activate YES	STABILIZING, 2.25 ppm, 13.2 mV, 5.00 ppm corrected, Accept Cal?
Activate NO	Enter Cal 2 Value, 2.25 ppm, Change value to the DPD tested value, OK?
Activate OK	OFFSET: 0.00 ppm, 2.3 mV, SLOPE: 14.1 mV/ ppm (data written to Log)
Activate OK	Calibration complete
Activate HOME	Hold is ON
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

4.4.2 STANDARDIZE

The Standardize Calibration is the Primary method for calibrating the Free Chlorine sensor. It is the easiest and most straight forward method of calibration. Simply run a DPD test and enter the value in the entry screen.

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes, erases CAL Log in INFO, NO adds CAL to existing Log)
Activate NO	Place Sensor in Air or the process solution
Activate STAND	Enter Value
Activate ▲ ▼ NEXT	xxx.xx ppm (use arrows and NEXT to enter process value) OK?
Activate OK	xxx.xx ppm, xxx.x mV, Accept Value?
Activate YES	Current Value xx.xx, Desired Value xx.xx, Change xx.xx, OK?
Activate OK	Back to Cal Menu
Activate HOME	Hold is ON (Activate HOLD to turn off Hold)
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

4.4.3 MANUAL CAL

Manual Cal is a convenient way to reset the analyzer to default Status. Simply enter the actual zero point if it is known or 0.00 ppm = 00.0 mV and the default slope, 15 mV/ppm (60 mV/ppm for Low Range FCL) and the displayed value should be in the ballpark of the actual free chlorine value.

Action	Prompt
Double Activate any Button	MENU HOME, Hold is OFF
Activate HOLD	Hold freezes 4-20 mA Output and locks Alarm Relays during Calibration
Activate CAL	Is this a new Sensor? (Yes, erases CAL Log in INFO, NO adds CAL to existing Log)
Activate NO	Auto, Stand, Manual, Temp
Activate MANUAL	Enter Zero Value
Activate ▲ ▼ NEXT	00.00 ppm (use arrows and NEXT to enter ppm value)
Activate mV Button	Enter mV value for zero ppm solution (default use 0.5 mV)
Activate ▲ ▼ NEXT	00.00 mV (use arrows and NEXT to enter mV value)
Activate OK	OFFSET: 0.00 ppm, 0.2 mV, Accept Value?
Activate YES	Enter Slope, 00.0 mV/ppm
Activate ▲ ▼ NEXT	15.00 mV/ppm
Activate OK	Slope 15.00 mV/ppm, (60.00 mV/ppm for Low Range) Accept this Value?
Activate YES	Back to Cal Menu
Activate HOME	Hold is ON (Activate HOLD to turn off Hold)
Activate HOLD	Turn off Hold
Activate EXIT	Main Display

5.0 MAINTENANCE

The Model LXT380 transmitter requires no periodic maintenance, except to make sure the front window is kept clean in order to permit a clear view of the display and allow proper operation of the navigation buttons. If the window becomes soiled, clean it using a soft damp cloth or soft tissue. To deal with more stubborn stains, a neutral detergent or spray cleaner like Windex may be used. Never use harsh chemicals or solvents.

When you open the front cover and/or cable glands, make sure that the seals are clean and correctly fitted when the unit is re-assembled in order to maintain the housing's NEMA 4X weatherproof integrity against water and water vapor.

5.1 FREE CHLORINE SENSOR

Check the measurement at regular intervals, at least once a month. If the membrane is visibly soiled clean it with a jet of water or a dilute HCl solution between 1-5%. Do not clean with detergents or solvents that would reduce the surface tension of the membrane.

Replacing the Membrane (PN 1000238)

Replace the membrane if heavily soiled or torn. First unscrew the measuring chamber and pour out the potassium chloride electrolyte. Unscrew the membrane cap. Remove the membrane from the cap, replace the membrane and reinstall the cap on the measuring chamber. Finally Refill the measuring chamber as described below.

Refilling the Sensor

Refill the sensor with electrolyte once a year or sooner depending on the chlorine level measured. Refill every 6 months for levels between 10 – 20 ppm and at every membrane change.

Unscrew the measuring chamber from the sensor and pour out the spent solution.

Fill the chamber to approximately 1 cm from the top and tap it gently to dislodge any trapped bubbles inside the chamber.

Screw the measuring chamber vertically back onto the sensor ensuring all air inside the chamber is displaced with liquid.

When the o-ring begins to seal continue slowly tightening until the stop.

The sensor is ready to use, re-polarize the sensor for 60 minutes and recalibrate as described above.

Storage

The method for Storage of the sensor is dependent on time.

For short term storage of several weeks the sensor can be stored filled inside the yellow protective cap as long as the membrane is not allowed to dehydrate. Make sure the sponge inside the cap is wetted. For longer terms rinse out the electrolyte with distilled water and allow the sensor to dry. Loosely reassemble the dry sensor so as not to tension the membrane during storage.



5.2 PH SENSOR

All electrochemical sensors require periodic cleaning and/or replacement. The life of an electrode is dependent on the process conditions it is exposed to, a pH electrode may last a year or longer in potable water and only a few weeks in a hot caustic bath. The chemical constituents in the process may coat the electrode surfaces requiring the electrode to be removed and cleaned or replaced.

Cleaning agents should be specific to the type of coating, detergents and alcohols for removing greases and oils, acids for removing hard water scales and metallic deposits or spray washing for flocculants and biofilms.

5.2.1 ELECTRODE CARTRIDGE INSTALLATION

Unless ordered separately, electrode cartridges are generally shipped installed in a sensor. Sensors ordered without an electrode are shipped with a shipping plug to keep contamination from getting inside the sensor during shipment or storage. The following procedure explains how to install the electrode cartridge in the sensor assembly:

1. Remove the shipping plug by turning it counterclockwise.
2. Remove the electrode cartridge from the protective soaker boot. *Be careful not to flex the electrode body while removing the tape and the protective boot.*
3. Rinse the electrode tip in tap water and wipe the electrode body dry then lubricate the o-ring seals with the included lubricant. *Save the protective soaker boot in the event the electrode must be stored at a future time.*
4. Carefully insert the electrode cartridge into the sensor assembly by turning until **hand tight**. The first o-ring, closest to the front of the electrode, will be slightly visible if held horizontally.

NOTE: IF EXCESS FORCE IS REQUIRED DURING ELECTRODE INSTALLATION, CHECK FOR PROPER THREAD ENGAGEMENT OR FOR AN OBSTRUCTION.

5.2.2 ELECTRODE CARTRIDGE REPLACEMENT

Periodic replacement of the electrode cartridge is required for pH, ORP and Specific Ion sensors. The following procedure explains how to replace the electrode cartridge in the sensor assembly:

1. Remove the electrode cartridge from the front of the sensor assembly by turning it counterclockwise.
2. For installation procedure follow steps 2, 3, and 4 in section 8.3.1 electrode cartridge installation.

5.2.3 ELECTRODE CLEANING

An important aspect of sensor maintenance is the service of the electrode cartridge. After being in operation, an electrode may begin to exhibit slow response or non-reproducible measurements. This may be due to coating of the measurement electrode or clogging of the reference junction. Regular electrode cleaning reduces problems associated with the coating and clogging. Frequency of cleaning will depend on the process and application. The following procedures are used to clean pH and ORP electrodes.

If possible, the electrode should be cleaned without removing it from the sensor body. However, if the electrode must be removed, the o-rings must be inspected and re-lubricated.

5.2.4 PH ELECTRODE CARTRIDGE CLEANING

Remove the sensor from the process and carefully wash the wetted end of the electrode cartridge in a mild solution of detergent and water or with methyl alcohol. If the electrode response is not improved, soak the electrode in 0.1 Molar HCl for 5 minutes. Remove and rinse the electrode with tap water and soak in 0.1 Molar NaOH for 5 minutes.

Remove the electrode from the NaOH solution, rinse the electrode with copious amounts of tap water and soak in a 4 pH buffer solution for 10 minutes. This should improve the response of the electrode. If not, replace the electrode.

If the electrode must be left out of the process for an extended period of time, store it in a solution of water saturated with KCl or a 4.0 pH buffer solution. *TAI does not recommend the storage of electrodes in distilled or deionized water.*

5.3 CONSTANT HEAD FLOW CONTROLLER (CHFC)

The CHFC is designed to provide a constant flow to the Free Chlorine Sensor (FCS) independent of variations in the sample activateure. Decreasing the sample flow to the FCS will lower the output of the FCS. In most clean water applications the CHFC requires no maintenance. The vertical position of the central tube sets the Head Activateure of the system. It is set for optimal flow but lower flow rates can be attained by adjusting its height.

On a monthly basis visually inspect the CHFC, the interconnecting tubing and the drain tubing for obstructions or sediments that may reduce the flow. The CHFC and tubing can be easily disassembled and cleaned with soap and water. Some dirty applications like blowdown from Cooling Towers may require periodic cleaning due to sediments.

6.0 TROUBLESHOOTING

The FCA380 was evaluated and calibrated at the factory before shipment. Upon initial start up the system should require minimal to no adjustments.

Verify the system has adequate flow, greater than 10 gals /hr. This is accomplished by setting the flow to the CHFC so that the water fills the outer chamber and slightly overflows into the center tube. Verify the pH electrode and the temperature sensor are reading correctly. These parameters effect the measurement and must meet the standards listed in the Calibration Section above. If these conditions are met and problems still exist use the Troubleshooting Table to find a remedy.

Troubleshooting Guide

Symptom	Possible Cause	Remedy
Displayed value is Higher than DPD test value.	Insufficient Polarization time	Polarize FCS for full 90 minutes before calibration.
	Damaged Membrane Cap	Replace Membrane Cap
	pH indication higher than actual value	Calibrate pH sensor
	Temperature indication lower than actual value	Calibrate the Temperature (see Calibration) The temperature sensor lags the process temperature wait for temperature equilibrium.
Displayed value is Lower than DPD test value	Electrical short or wet connection inside the sensor or cable assembly	Remove measuring chamber and dry the cathode surface, if the indication does not go to zero there is leakage. Replace the sensor.
	Chloramine or other oxidants present in sample yielding a high DPD test.	Retest water
	Coated or dirty membrane	Clean or replace the membrane
	Low tension on the membrane	Verify the Measuring Chamber is fully tightened onto the body or replace membrane.

<p>Displayed value is Lower than DPD test value (cont'd)</p>	<p>Flow to low through the flow cell</p> <p>Air bubbles trapped on membrane</p> <p>Air bubble inside the sensor between cathode and membrane</p> <p>pH indication lower than actual value</p> <p>Temperature indication is higher than actual value.</p>	<p>Clean CHFC, fittings and tubing, verify the sample feed rate is 10+ gal/hr.</p> <p>Loosen FCS fitting and lift sensor slightly to purge air trapped in the flow cell.</p> <p>Refill sensor, see Maintenance</p> <p>Calibrate pH sensor</p> <p>Calibrate the Temperature (see Calibration) The temperature sensor lags the process temperature wait for temperature equilibrium.</p>
<p>Zero Chlorine Reading</p>	<p>No electrolyte in the sensor</p> <p>Open Circuit on FCS, broken or bad electrical connection</p>	<p>Refill Sensor</p> <p>Check connector and wiring to the connector inside the LXT380</p>
<p>Unstable Chlorine Reading</p>	<p>Air bubbles on the membrane</p> <p>Changing temperature, the lag of the temperature sensor looks like drift</p>	<p>Loosen FCS fitting and lift sensor slightly to purge air trapped in the flow cell.</p> <p>Wait for equilibrium</p>

7.0 PARTS AND ACCESSORIES

7.1 FCA380 REPLACEMENT PARTS

Part #	Description
S02052	Free Chlorine Sensor, Standard Range, 0.5 – 20.0 ppm HOCl/OCl ⁻
S02164	Free Chlorine Sensor, Low Range, 0.01 – 5.00 ppm HOCl/OCl ⁻
K00277	Membrane Replacement Kit (2 Cap, 50 ml bottle of electrolyte)
CP03030	pH replacement electrode cartridge
SP3X-00-0C66-0B00	pH Sensor, 316L SS body with Flange, 4' cable

7.1 LXT380 REPLACEMENT PARTS

Part #	Description
S01642	Screwdriver with magnetic tip
BP00123	SP3X sensor barrier

APPENDIX

A. AUTO CAL BUFFER TABLES

°C	pH	pH	pH
0	4.00	7.115	10.32
5	4.00	7.085	10.25
10	4.00	7.06	10.18
15	4.00	7.04	10.12
20	4.00	7.015	10.06
25	4.005	7.00	10.01
30	4.015	6.985	9.97
35	4.025	6.98	9.93
40	4.03	6.975	9.89
45	4.045	6.975	9.86
50	4.06	6.97	9.83
55	4.075	6.97	
60	4.085	6.97	
65	4.10	6.98	
70	4.13	6.99	
75	4.14	7.01	
80	4.16	7.03	
85	4.18	7.05	
90	4.21	7.08	

B. MODBUS RTU REGISTER LISTING

03 (0X03) READ HOLDING REGISTERS

This function code is used to read the contents of a contiguous block of holding registers in a remote device. The Request Protocol Data Unit specifies the starting register address and the number of registers. In the Protocol Data Unit Registers are addressed starting at zero. Therefore registers numbered 1-16 are address as 0-15. The register data in the response message are packed as to bytes per register, with the binary contents right justified within each byte. For each register, the first byte contains the high order bits and the second contains the low order bits.

Request

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Function code	1 Byte	0x03
Starting Address	2 Bytes	0x0000 to 0xFFFF
Quantity of Registers	2 Bytes	1 to 125 (0x01 to 0x7D)
CRC	2 Bytes	calculated

Response

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Function code	1 Byte	0x03
Byte Count	1 Byte	2 X N*
Register Value(s)	*N X 2 Bytes	
CRC	2 Bytes	calculated
*N = Quantity of Registers		

Error

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Error Code	1 Byte	0x86
Exception Code	1 Byte	01, 02, 03 or 04
CRC	2 Bytes	calculated

06 (0x06) WRITE SINGLE REGISTER

This function code is used to write a single holding register in a remote device.

The Request Protocol Data Unit specifies the address of the register to be written. Registers are addressed starting at zero. Therefore register number 1 is addressed as 0.

The normal response is an echo of the request, returned after the register contents have been written.

Request

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Function code	1 Byte	0x06
Register Address	2 Bytes	0x0000 to 0xFFFF
Register Value	2 Bytes	0x0000 to 0xFFFF
CRC	2 Bytes	calculated

Response

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Function code	1 Byte	0x06
Register Address	2 Bytes	0x0000 to 0xFFFF
Register Value	2 Bytes	0x0000 to 0xFFFF
CRC	2 Bytes	calculated

*N = Quantity of Registers

Error

Modbus ID (Slave Address)	1 Byte	1 to 247 (0x01 to 0xF7)
Error Code	1 Byte	0x86
Exception Code	1 Byte	01, 02, 03 or 04
CRC	2 Bytes	calculated

REGISTERS

Per the Modbus Application Protocol Specification (V1.1b)

Name	Meaning (2 bytes each register)	Registers	Return Data Format	Read Write	Requires Storage Initiate	Register #	
						dec	hex
Modbus ID (slave address)	Defined as 1 to 247 per the Modbus Application Protocol Specification (V1.1b)	1	16 bit Integer	R W		0	00
Data Format	Data Format of the User Bus to the LXT380 (0-DF8N2, 1-DF8O1, 2-DF8E1, 3-DF8N1)	1	16 bit Integer	R W		1	01
Baud Rate	Baud Rate of the User Bus to the LXT380 (0-1200, 1-2400, 2-4800, 3-9600)	1	16 bit Integer	R W		2	02
BusMessage	total message count detected by the slave (remote device)	1	16 bit Integer	R		3	03
BusCommunicationsError	total CRC error count	1	16 bit Integer	R		4	04
SlaveExceptionError	total count of exceptions detected	1	16 bit Integer	R		5	05
SlaveMessage	total messages addressed to the slave (remote device)	1	16 bit Integer	R		6	06

SlaveNoResponse	total count of messages not responded to by the slave (remote device)	1	16 bit Integer	R		7	07
SlaveNAK	total Negative Acknowledges returned by slave (remote device)	1	16 bit Integer	R		8	08
SlaveBusy	total count of "slave busy" was returned for an address message	1	16 bit Integer	R		9	09
BusCharacterOverrun	count of messages that couldn't be handled due to character over-run condition	1	16 bit Integer	R		10	0A
Reset all Modbus Error Counters	Resets all of the Modbus Error counters (defined in Modbus spec) to 0, Write any value.	1	16 bit Integer	W		11	0B
Product LXT380 Model Number (Modbus)	The Model Number of the Unit polled	1	16 bit Integer	R		12	0C
LXT380 Serial Number (hi word)	Unit Serial Number (32 bit integer hi word, bytes 3 and 2)	2	32 bit Long Integer	R		13	0D
LXT380 Serial Number (lo word)	Unit Serial Number (32 bit integer lo word, bytes 1 and 0)					14	0E
LXT380 Mode	Unit operating mode (1-Startup, 2-Sensor Search, 3-Operate)	1	16 bit Integer	R		15	0F
LXT380 Fault Status	Unit Fault flags, bit defined	1	16 bit Integer	R		16	10
LXT380 2nd Fault Status	Unit Fault flags (2nd word reserved, currently not used)	1	16 bit Integer	R		17	11
LXT380 Warning Status	Unit Warning flags, bit defined	1	16 bit Integer	R		18	12
LXT380 2nd Warning Status	Unit Warning flags (2nd word reserved, currently not used)	1	16 bit Integer	R		19	13
LXT380 FW Rev	Firmware revision of the Control BD in ASC, ex. "1".	1	16 bit Integer	R		20	14
Relay Number to read/write	Relay number to access data (0 - Relay 1, 1 - Relay 2, 2 - Relay 3)	1	16 bit Integer	R W		21	15
Relay Type	Read/Write Relay Type (0 - Fault Type, 1 - Alarm Type, 2 - Disabled, 3 - Timed)	1	16 bit Integer	R W	Y	22	16
Relay ON Setpoint (hi word)	Read/Write Relay ON Setpoint (byte 3 and byte 2)	2	32 bit Floating Point	RW	Y	23	17
Relay ON Setpoint (lo word)	Read/Write Relay ON Setpoint (byte 1 and byte 0)					24	18
Relay OFF Setpoint (hi word)	Read/Write Relay OFF Setpoint (byte 3 and byte 2)	2	32 bit Floating Point	RW	Y	25	19
Relay OFF Setpoint (lo word)	Read/Write Relay OFF Setpoint (byte 1 and byte 0)					26	1A
Relay ON Delay (hi word)	Read/Write Relay turn on Delay time (byte 3 and byte 2)	2	32 bit Floating Point	RW	Y	27	1B
Relay ON Delay (lo word)	Read/Write Relay turn on Delay time (byte 1 and byte 0)					28	1C
Relay OFF Delay (hi word)	Read/Write Relay turn off Delay time (byte 3 and byte 2)	2	32 bit Floating Point	RW	Y	29	1D
Relay OFF Delay (lo word)	Read/Write Relay turn off Delay time (byte 1 and byte 0)					30	1E
Relay Energized State	Read/Write Relay 0 - Energized, 1 - De-Energized	1	16 bit Integer	R W	Y	31	1F
Relay Expiration	Read/Write Expiration Time, used with alarm type (0 - None, 2 - 5min., 3 - 10min., 4 - 15min., 6 - 30min.)	1	16 bit Integer	R W	Y	32	20
Relay Period	Read/Write Timed Relay Period (0 - 15min., 1 - 30min., 2 - 1hr., 3 - 2hr., 4 - 4hr., 5 - 8hr., 6 -	1	16 bit Integer	R W	Y	33	21

	24hr.)						
Relay Duration	Read/Write Timed Relay Duration (0 - 15sec., 1 - 30sec., 2 - 1min., 3 - 2min., 4 - 5min., 5 - 15min., 6 - 10min.)	1	16 bit Integer	R W	Y	34	22
Relay Hold Time	Read/Write Timed Relay Hold Time (0 - Off, 1 - held for the duration time, 2 - duration + 15sec., 3 - duration + 30sec., 4 - duration + 1min., 5 - duration + 2min., 6 - duration + 5 min., 7 - duration + 15min., 8 - duration + 30min.)	1	16 bit Integer	R W	Y	35	23
4-20 mA Channel Number to read/write	4-20 mA channel number to access data (0 - 1st 4-20mA, 1 - 2nd 4-20)	1	16 bit Integer	R W	Y	36	24
4-20 Analog Type	Read/Write 4-20 Type (0 - Range, 1 - Temperature, 2 - Sentinel)	1	16 bit Integer	R W	Y	37	25
4-20 Analog Range, 4mA range (hi word)	Read/Write 4mA range (bytes 3 and 2) applies to both range and temperature types	2	32 bit Floating Point	RW	Y	38	26
4-20 Analog Range, 4mA range (lo word)	Read/Write 4mA range (bytes 1 and 0) applies to both range and temperature types					39	27
4-20 Analog Range, 20mA range (hi word)	Read/Write 4mA range (bytes 3 and 2) applies to both range and temperature types	2	32 bit Floating Point	RW	Y	40	28
4-20 Analog Range, 20mA range (lo word)	Read/Write 4mA range (bytes 1 and 0) applies to both range and temperature types					41	29
Long Tag Line number to read/write	Tag Line number to access data (0 - Line 1, 1 - Line 2)	1	16 bit Integer	R W	Y	42	2A
Long Tag Line 1 (16 characters max)	ASCII character bytes 0 and 1, ex. "AB" A - 65 (41 hexadecimal), B - 66 (42 hex), send 6566 (4142 hex). The characters permitted are space ' ' (32 base 10, 20 hex) through '}' 125 base 10, 7D hex).	1	16 bit Integer	R W	Y	43	2B
Long Tag Line	ASCII bytes 2 and 3	1	16 bit Integer	R W	Y	44	2C
Long Tag Line	ASCII bytes 4 and 5	1	16 bit Integer	R W	Y	45	2D
Long Tag Line	ASCII bytes 6 and 7	1	16 bit Integer	R W	Y	46	2E
Long Tag Line	ASCII bytes 8 and 9	1	16 bit Integer	R W	Y	47	2F
Long Tag Line	ASCII bytes 10 and 11	1	16 bit Integer	R W	Y	48	30
Long Tag Line	ASCII bytes 12 and 13	1	16 bit Integer	R W	Y	49	31
Long Tag Line	ASCII bytes 14 and 15	1	16 bit Integer	R W	Y	50	32
Initiate LXT380 Parameter Storage	Signals the user has completed entering the data and wants it stored. Write any value.	1	16 bit Integer	R W		51	33
Sensor Channel to read/write	Sensor channel number to access data (0 - Sensor 1, 1 - Sensor 2)	1	16 bit Integer	R W		52	34
SP3X Mode	Unit operating mode (0-	1	16 bit Integer	R		53	35
SP3X Serial Number (hi word)	Unit Serial Number (32 bit integer hi word)	2	32 bit Long Integer	R		54	36
SP3X Serial Number (lo	Unit Serial Number (32 bit integer lo word)					55	37

word)							
SP3X Fault Status		1	16 bit Integer	R		56	38
SP3X Sensor Type	Specific SP3X sensor type (see SP3X Sensor Types tab)	1	16 bit Integer	R		57	39
SP3X Sensor Chemical Type	Specific chemicals the SP3X is set to detect (see SP3X Sensor Types tab)	1	16 bit Integer	R W	Y	58	3A
SP3X Max Range (hi word)	Max sensor range (bytes 3 and 2)	2	32 bit Floating Point	R		59	3B
SP3X Max Range (lo word)	Max sensor range (bytes 1 and 0)					60	3C
SP3X Min Range (hi word)	Min sensor range (bytes 3 and 2)	2	32 bit Floating Point	R		61	3D
SP3X Min Range (lo word)	Min sensor range (bytes 1 and 0)					62	3E
SP3X Sensor Value (hi word)	Current sensor value (bytes 3 and 2)	2	32 bit Floating Point	R		63	3F
SP3X Sensor Value (lo word)	Current sensor value (bytes 1 and 0)					64	40
SP3X Sensor Voltage (hi word)	Corresponding sensor voltage to the sensor value (byte 3 and byte 2)	2	32 bit Floating Point	R		65	41
SP3X Sensor Voltage (lo word)	Corresponding sensor voltage to the sensor value (byte 1 and byte 0)	2	32 bit Floating Point	R		66	42
SP3X Sensor Temperature (hi word)	Sensor Temperature (bytes 3 and 2)	2	32 bit Floating Point	R		67	43
SP3X Sensor Temperature (lo word)	Sensor Temperature (bytes 1 and 0)					68	44
SP3X Sensor is a Sentinel	Sensor is a Sentinel Type (0 - No, 1 - Yes)	1	16 bit Integer	R		69	45
SP3X Sentinel Life %	% of Sensor life remaining	1	16 bit Integer	R		70	46
SP3X Sentinel Vs (hi word)	Scaled Sentinel Voltage (in mV) normalized to Vo (bytes 3 and 2)	2	32 bit Floating Point	R		71	47
SP3X Sentinel Vs (lo word)	Scaled Sentinel Voltage (in mV) normalized to Vo (bytes 1 and 0)					72	48
SP3X Sentinel Vo (hi word)	Sentinel 100% value (in mV) on the life relative to 0V (bytes 3 and 2)	2	32 bit Floating Point	RW	Y	73	49
SP3X Sentinel Vo (lo word)	Sentinel 100% value (in mV) on the life relative to 0V (bytes 1 and 0)					74	4A
SP3X Sentinel Range (hi word)	Sentinel Range (bytes 3 and 2)	2	32 bit Floating Point	RW	Y	75	4B
SP3X Sentinel Range (lo word)	Sentinel Range (bytes 1 and 0)					76	4C
Sensor Full Name (18 characters max)	ASCII character bytes 0 and 1, ex. "AB" A - 65 (41 hexadecimal), B - 66 (42 hex), send 6566 (4142 hex). The characters permitted are space ' ' (32 base 10, 20 hex) through '}' 125 base 10, 7D hex).	1	16 bit Integer	R W	Y	77	4D
Sensor Full Name	ASCII bytes 2 and 3	1	16 bit Integer	R W	Y	78	4E
Sensor Full Name	ASCII bytes 4 and 5	1	16 bit Integer	R W	Y	79	4F
Sensor Full Name	ASCII bytes 6 and 7	1	16 bit Integer	R W	Y	80	50

Sensor Full Name	ASCII bytes 8 and 9	1	16 bit Integer	R W	Y	81	51
Sensor Full Name	ASCII bytes 10 and 11	1	16 bit Integer	R W	Y	82	52
Sensor Full Name	ASCII bytes 12 and 13	1	16 bit Integer	R W	Y	83	53
Sensor Full Name	ASCII bytes 14 and 15	1	16 bit Integer	R W	Y	84	54
Sensor Full Name	ASCII bytes 16 and 17	1	16 bit Integer	R W	Y	85	
Sensor Abbreviated Name (8 characters max)	ASCII character bytes 0 and 1, ex. "AB" A - 65 (41 hexadecimal), B - 66 (42 hex), send 6566 (4142 hex). The characters permitted are space ' ' (32 base 10, 20 hex) through '}' 125 base 10, 7D hex).	1	16 bit Integer	R W	Y	86	56
Sensor Abbreviated Name	ASCII bytes 2 and 3	1	16 bit Integer	R W	Y	87	57
Sensor Abbreviated Name	ASCII bytes 4 and 5	1	16 bit Integer	R W	Y	88	58
Sensor Abbreviated Name	ASCII bytes 6 and 7	1	16 bit Integer	R W	Y	89	59
Initiate SP3X Storage	Signals the user has completed entering the data and wants it stored. Write any value.	1	16 bit Integer	W		90	5A
Cal log number to read	Cal log number to read (0 - Cal Log 1, 1 - Cal Log 2, 2 - Cal Log 3)	1	16 bit Integer	R W		91	5B
SP3X Cal Log slope (hi word)	(bytes 3 and 2)	2	32 bit Floating Point	R		92	5C
SP3X Cal Log slope (lo word)	(bytes 1 and 0)					93	5D
SP3X Cal Log offset (hi word)	(bytes 3 and 2)	2	32 bit Floating Point	R		94	5E
SP3X Cal Log offset (lo word)	(bytes 1 and 0)					95	5F
SP3X Cal Log offset Voltage (hi word)	(bytes 3 and 2)	2	32 bit Floating Point	R		96	60
SP3X Cal Log offset Voltage (lo word)	(bytes 1 and 0)					97	61

FAULT STATUS

Bit #	bit meaning
0	Memory Error, either a Program Flash, RAM or NVM RAM checksum error has occurred
1	Input Voltage Out Of Tolerance
2	The On Board +12V is Out of Tolerance
3	The On Board +3.3V is Out of Tolerance
4	The Transmitter has lost communication link with the Sensor
5	There is no Sensor connected
6	Sensor Calibration Failed
7	Relay 1 on-time expired
8	Relay 2 on-time expired
9	Relay 3 on-time expired
10	Sentinel Error (useable life has expired)
11	Sentinel Poisoned
12	Membrane Error
13	NU
14	NU
15	NU


WARNING STATUS

Bit #	bit meaning
0	The Sensor has changed from previously connect Sensor
1	Not Used (NU)
2	NU
3	NU
4	NU
5	NU
6	NU
7	NU
8	NU
9	NU
10	NU
11	NU
12	NU
13	NU
14	NU
15	NU

SENSOR TYPE

Data		Meaning		
Decimal	Hexadecimal	Chemical	Sensor Type	Measurement Units
16	0010	pH	mV	none
35	0023	FCA (max range)	FCA	mg/L
36	0024	FCA (min range)	FCA	mg/L
37	0025	FCA HR	FCA	mg/L
57	0039	FCL (max range)	FCL	mg/L

NOTES: UNLESS OTHERWISE SPECIFIED.

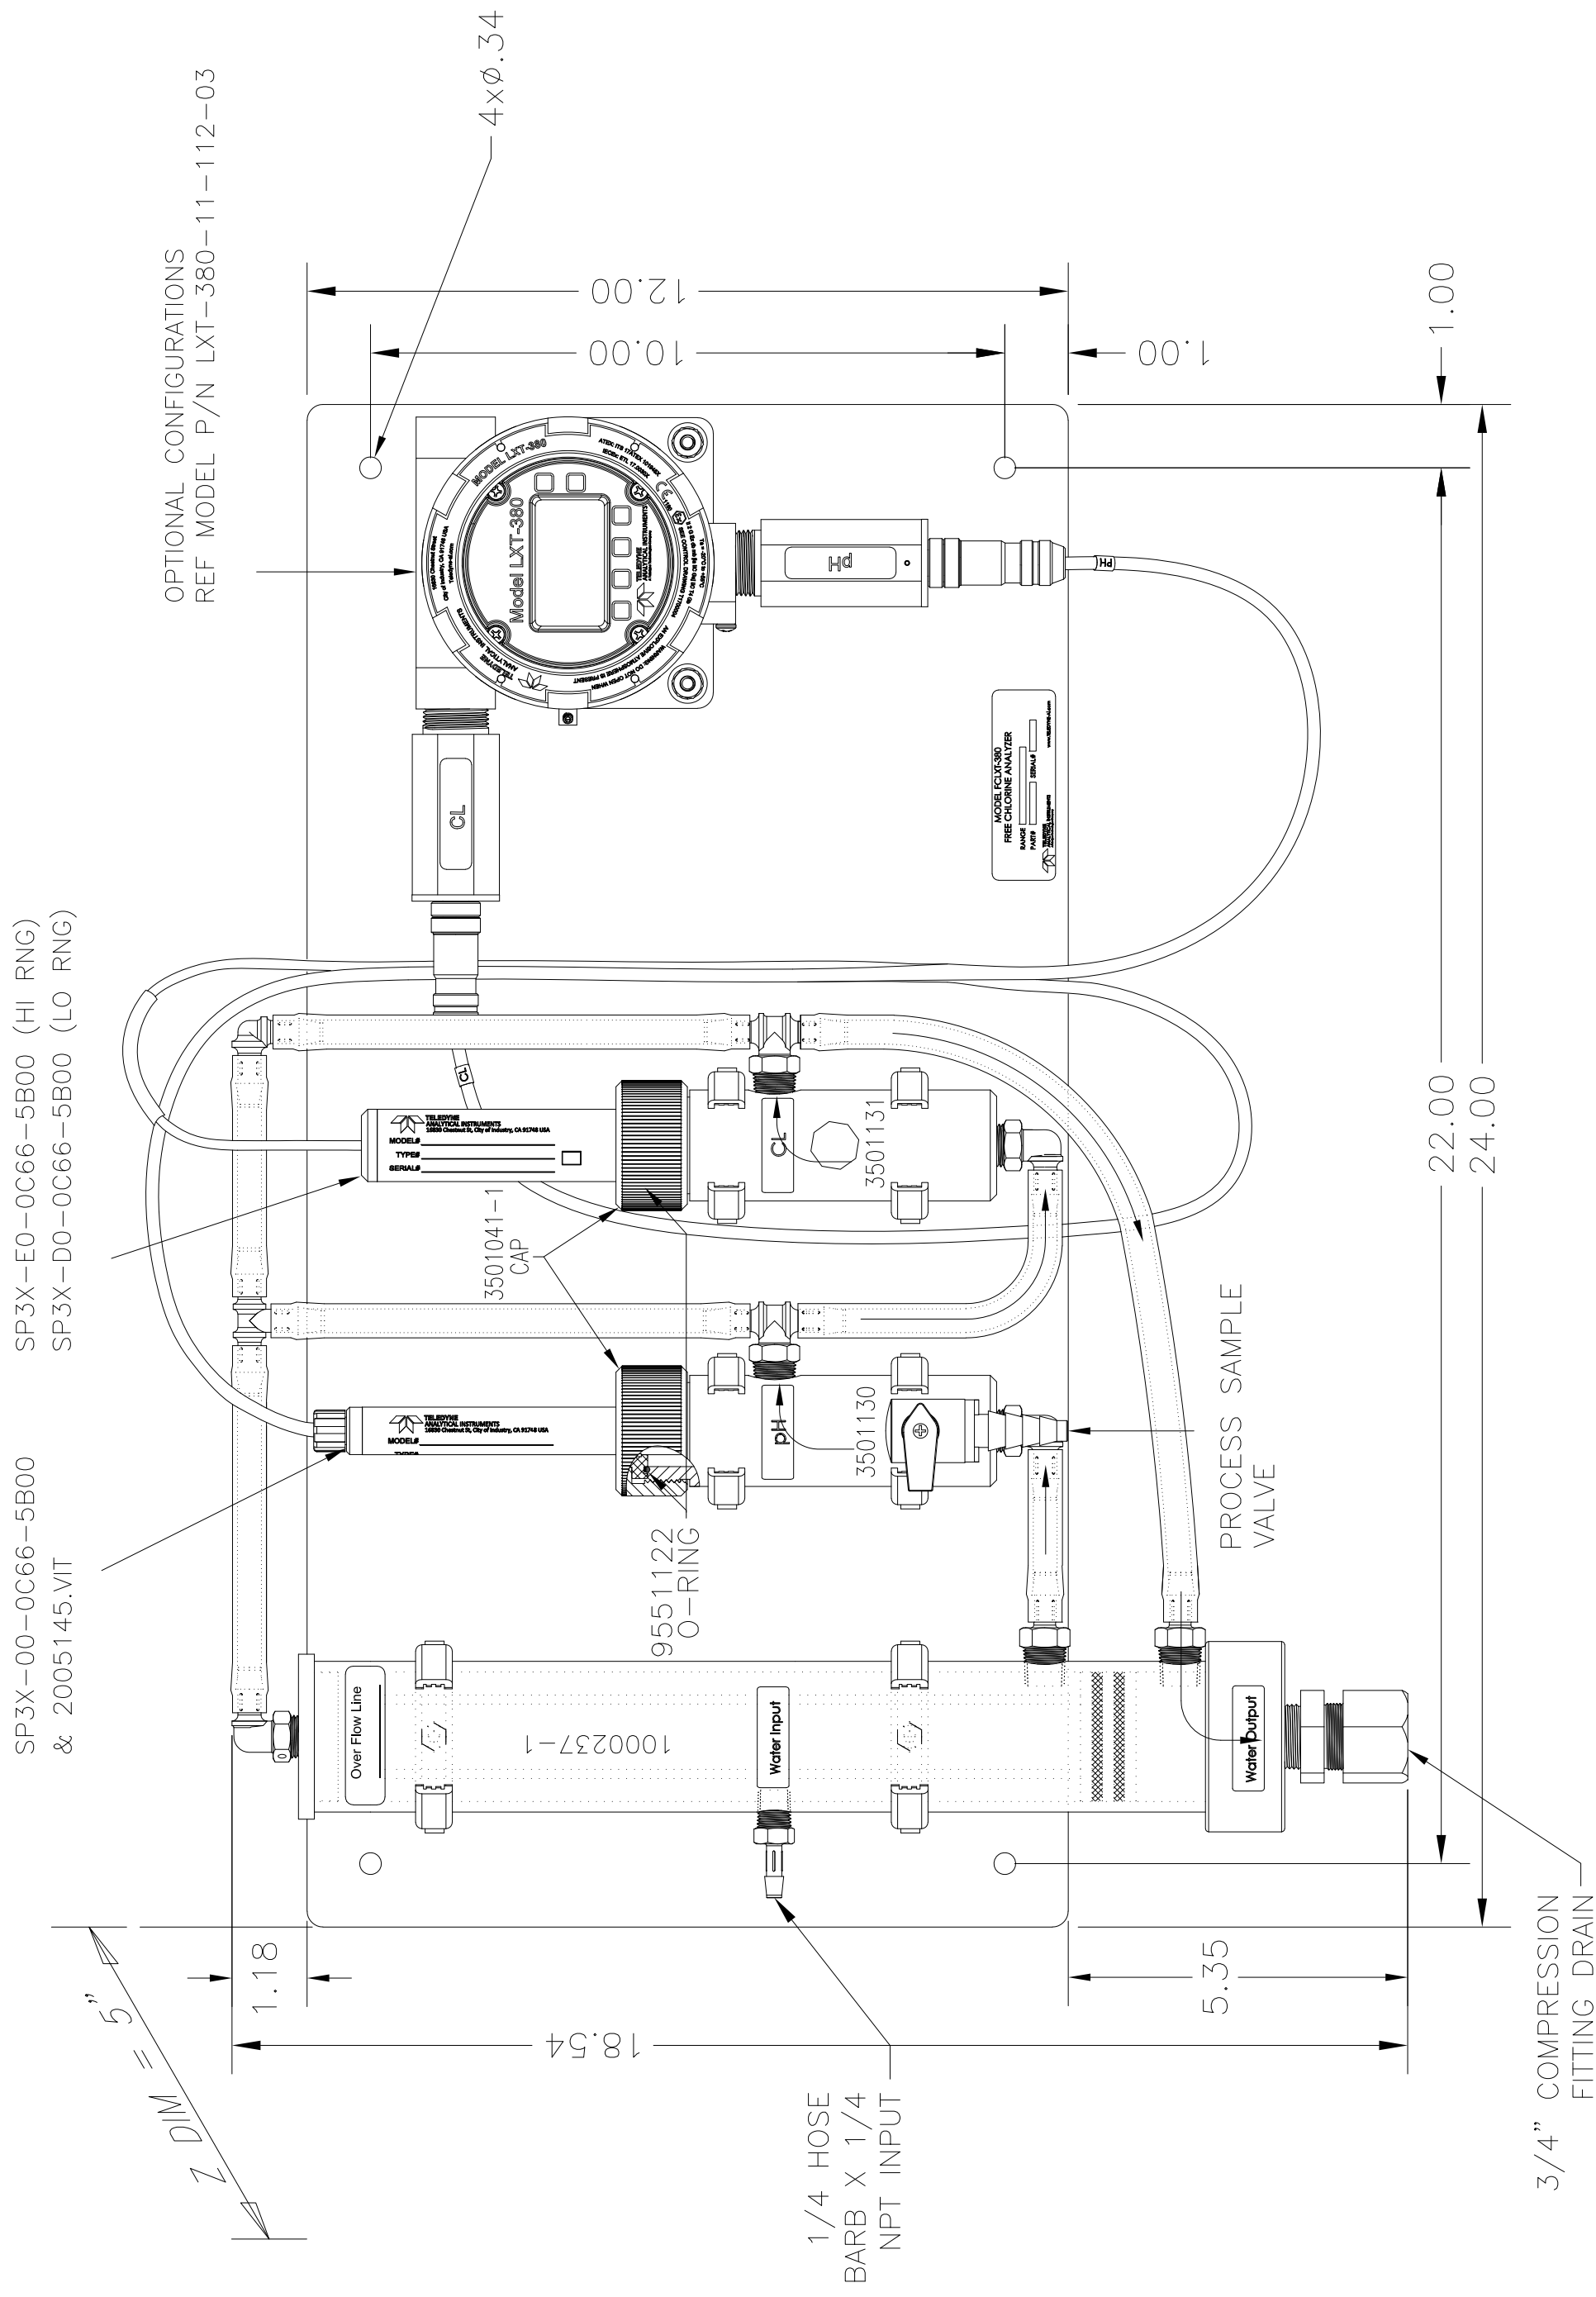

REV	DESCRIPTION	DATE	APP.	REV. BY
0	INITIAL RELEASE	11/08/22	JCR	--

REVISIONS

UNLESS OTHERWISE SPECIFIED		UNLESS OTHERWISE SPECIFIED	
DIMENSIONS ARE IN INCHES		TOLERANCE	
ANGULAR ±1/2°		LINEAR -XX = ±.1 XX = ±.02 L,XXX = ±.010	
SIGNATURES	DATE	TITLE	
DRFT: JOHN REYES	11/08/22	OUTLINE DIAGRAM	
CHK:		ANALYSIS UNIT	
APPR:		MODEL FCA380	
ENGR: JOHN REYES		MATERIAL:	
C.O.: STANDARD		NONE	
REFERENCE	CAD ID C96024-0	DWG NO. C-96024	
		REV 1 OF 1	
		SCALE NONE	
		SIM NONE	
		SHEET 1 OF 1	

Use and Disclosure of Data
"Information contained herein is classified as EAR99 under the U.S. Export Administration Regulation. Export, reexport or diversion contrary to U.S. law is prohibited."

D 4 3 2 1

A

4

3

2

1

D


C

B

A

1

NOTES: UNLESS OTHERWISE SPECIFIED.

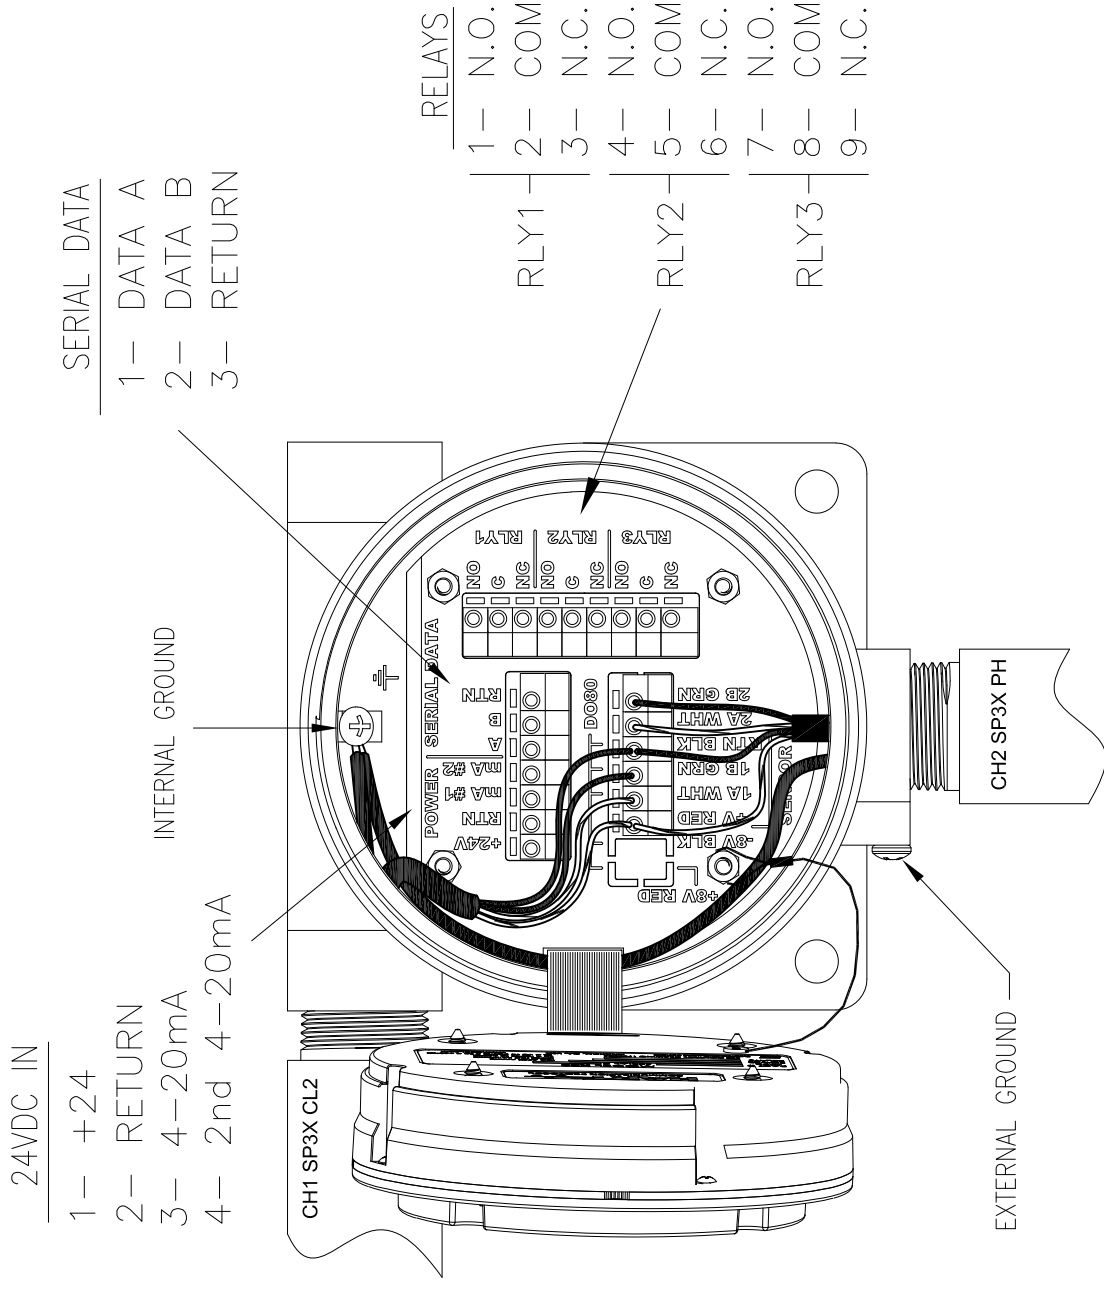

REVISIONS

REV	DESCRIPTION	DATE	APP.	REV. BY
0	INITIAL RELEASE	11/08/22	JCR	--

DO NOT SCALE DRAWING		THIS DRAWING IS THE PROPERTY OF TELEDYNE ANALYTICAL INSTRUMENTS AND CONTAINS CONFIDENTIAL INFORMATION. IT IS NOT TO BE COPIED, REPRODUCED OR USED WITHOUT WRITTEN PERMISSION.	
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCE:		TELEDYNE <i>Analytical Instruments</i> A Business Unit of Teledyne Instruments, Inc. City of Industry, California 91748, USA	
ANGULAR ±1/2°		Analytical Instruments A Business Unit of Teledyne Instruments, Inc. City of Industry, California 91748, USA	
SIGNATURES	DATE	TITLE	
DRFT: JOHN REYES	11/08/22	INTERCONNECTION DIAGRAM	
CHK:		ANALYSIS UNIT	
APPR:		MODEL FCA380	
ENGR: JOHN REYES		SCALE	NONE
C.O.: STANDARD		SIM	NONE
REFERENCE		SHEET	1 OF 1
CAD I.D. B96023-0		MATL.	NONE
		DWG NO.	B-96023
		REV	0

Use and Disclosure of Data
 "Information contained herein is classified as EAR99 under the
 U.S. Export Administration Regulation.
 Export, reexport or diversion contrary to U.S. law is prohibited."